

HUAWEI Mate 20 X^{5G}

User Guide



HUAWEI

Contents

Exciting Features

Featured Usage Tips	1
Camera Tips	3
Connect and Share	8
Manage Your Phone	10

New Device

New Device Configuration	15
Introduction to SuperCharge	17

Gestures and Operations

Smart Recognition	19
HiSearch: Search for Matching Text and Images	21

Home Screen

Navigation Bar	22
Use Shortcut Switches to Quickly Enable Frequently Used Features	22
Notification Panel and Status Bar	22
Screen Lock and Unlock	25
Go Back to Basics with Simple Mode	26
Home Screen Management	27

Contacts

Managing Business Cards	30
Search Contacts	31
Managing Contacts	32

Dialling

Basic Calling Functions	34
Make Calls While Using the Internet with VoLTE	35
Use VoWi-Fi for a New Calling Experience	36

Camera

Basic Camera Functions	37
Use Portrait Mode to Shoot Like a Pro	39
Use AR lens to Shoot Interesting Photos	39
Use Wide Aperture Mode to Highlight Your Shooting Subjects	40
Panorama	40
Pro Mode	41
Take Black and White Photos	43
Light Painting Mode	44
More Capture Modes	49

Gallery

Highlights	51
Photo Management	52

Phone Manager

Use Optimise	56
Manage Mobile Data Usage	56
Enable Smart Power Saving	56
Use Auto-launch to Prevent Unwanted App Activities	57
Enable Virus Scanner	57

Email

Add Email Accounts	59
Manage Email Accounts	59
Manage VIP Email Contacts	60
Create Smart Groups	60
Import Important Events to Calendar	60
Set Auto Response for Exchange Email	60

Calendar

Navigate the Calendar	61
Import To-Dos to Keep Your Work Organised	61
View Global Holidays	61

Clock

Use the Clock	63
---------------	----

Notepad

Manage Your Notes to Keep Your Records in Order	64
---	----

Utilities

Check Your Screen Time	65
Use Recorder to Make Audio Notes	65
Phone Clone	65

HUAWEI ID and Multiple Users

Set and Use Multiple Users	69
----------------------------	----

Device Connection

Bluetooth	71
NFC	73
Huawei Share	77

Security and Privacy

Face Unlock	79
Fingerprint	80

Enable or Disable Location Services	80
PrivateSpace	81
Enable App Lock	83
Use Password Vault	83
Enhanced Data Protection: Defend Your Privacy	84
Wi-Fi and Network	
Wi-Fi	86
Enable 5G	89
Connecting to the Internet	89
Share Your Mobile Network with Other Devices	89
Apps and Notifications	
App Twin: Log in to Two Social Media Accounts at Once	91
Customise App Permissions to Use Your Device Your Way	91
Sound and Display	
Set Up Do Not Disturb Mode	92
Configure the Sound Settings	92
Enable Eye Comfort Mode to Prevent Eye Strain	93
More Display Settings	93
Storage	
Enable Memory Cleanup	95
Smart Assistance	
Access Device Functions from Anywhere with Navigation Dock	96
Use a Flip Cover to Protect Your Device	96
Enable or Disable Mistouch Prevention	97
System	
Change the Input Method	98
General Settings	98
Legal Notice	
Legal Notice	101
Personal Information and Data Security	103
Obtaining help	103

Exciting Features

Featured Usage Tips

HiVision: Start Scanning to Learn More

Want to stick to a healthy diet and keep fit? Wish you could understand foreign logos, road signs, and restaurant menus while travelling abroad? Want to quickly get product information for comparisons and to make purchases faster? Use HiVision to get all these done fast and easily.

HiVision can provide you with the following features:

- **Scan food:** You can scan food to determine the weight, calories, and nutrition facts.
 - **Identify objects:** Scan to identify road signs or famous paintings. A card with relevant information about the geographical locations or the painting will be generated for you.
 - **Shop:** Scan the objects you like to get purchase recommendations.
 - **Translate:** Scan words or phrases in a foreign language for a quick online translation, making your trip abroad a breeze.
 - **Scan codes:** Scan QR codes or barcodes to add contacts or acquire product information.
-  • This feature requires access to the Internet to identify objects, scan codes, determine calories in food, shop, and translate.
- This feature is only supported in some countries and regions.

Enrol Your Facial Information and Enable Face Unlock

-  • Face unlock can only be used when the owner account is logged in. It is not supported by user and guest accounts, or by PrivateSpace.
- Face unlock is not available if the lock screen password has not been entered for at least three consecutive days, or if your device has been remotely locked or restarted.
 - When using Face unlock, keep your eyes open, and look straight at your device from a distance of 20–50 cm (about 8–20 inches). Your device may be unable to scan your face accurately if you are in an extremely dark environment or under direct lighting.
 - Currently, only one face can be enrolled. You can delete the current facial data and re-enrol your face.

1 Open  **Settings**. Go to **Security & privacy > Face recognition**, then enter your lock screen password.

 If you haven't set a lock screen password, follow the onscreen instructions to do so.

2 If you select **Enable pick up to wake**, the screen will turn on and unlock when you pick up your device and hold it in front of your face. If you do not need this feature, do not select the option. Touch **Get started** and enrol your face.

3 Face unlock modes:

- **Direct unlock:** On the **Face recognition** screen, touch **Unlock device** and select **Direct unlock**. When you turn the screen on, your device will automatically recognise your face and directly unlock the screen.
- **Slide to unlock:** On the **Face recognition** screen, touch **Unlock device** and select **Slide to unlock**. Once your device has recognised your face, slide on the lock screen to unlock it.
-  If you have enabled **Show notifications**, your device will hide notification details on the lock screen and display them only when the owner's face has been recognised.
- If you have also enabled **Access App lock**, you can access locked apps when your device recognises your face.

Pick Up to Unlock

Open  **Settings**, and go to **Security & privacy > Face recognition**. When enrolling facial data, select **Enable pick up to wake**, and set the Face unlock method to **Direct unlock**. Once the setup is complete, you can simply raise your device to unlock the screen, without a password or fingerprint.

If you haven't selected **Enable pick up to wake** when enrolling facial data, you can open  **Settings**, go to **Security & privacy > Face recognition**, and set the Face unlock method to **Direct unlock**. Then, open  **Settings**, go to **Smart assistance > Motion control > Pick up**, and select **Wake device**.

HiSearch: Search for Matching Text and Images

HiSearch can be a handy search tool to locate the apps and files you want.

HiSearch allows you to search through settings, files, contacts and notes while keeping a record of your search history.

- 1 Once your device is unlocked, swipe down from the middle part of the home screen to open **HiSearch**.
- 2 Enter an app or file name to run a search, then touch  in the search results to easily find the location of the app on the home screen.
- 3 Touch the  icon on the **HiSearch** interface to review **Search scope** or **Check for updates** here.

Access Device Functions from Anywhere with Navigation Dock

In order to close an app or return to the home screen, you must use the navigation bar at the bottom of your device. You can enable the Navigation dock feature on your device to avoid using navigation buttons and to comfortably operate your device with one hand.


Open  **Settings**. Go to **System > System navigation > Navigation dock** and enable **Navigation dock**. The Navigation dock will appear on the screen. You can then drag it to your preferred location. The Navigation dock can perform the following actions:

- **Back:** Touch the Navigation dock once to go back one step, or touch it twice to go back two steps.

- **Home:** Touch and hold the Navigation dock and then release it to go to the home screen.
- **View background apps:** Touch and hold the Navigation dock and then swipe left or right to view any apps that are running in the background.

Use Shortcut Switches to Quickly Enable Frequently Used Features

Want to quickly enable or disable mobile data or hotspot? You can enable frequently used features by using shortcut switches.

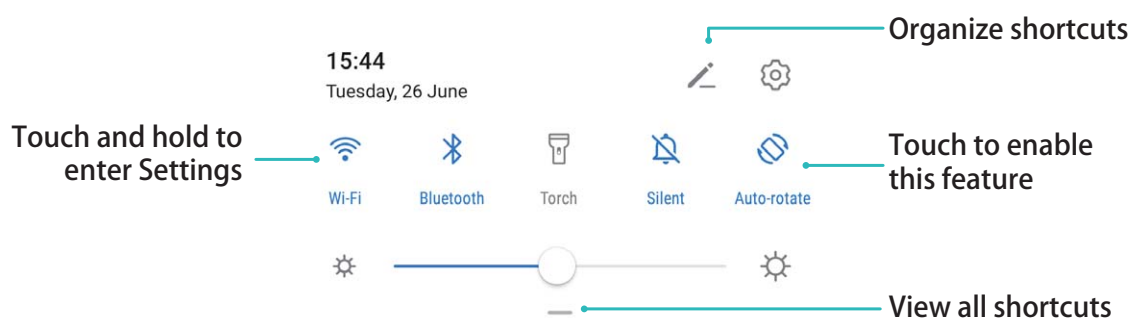

Camera Tips

Take Black and White Photos

The world is an amazingly colourful place. But sometimes too many colours can be distracting. Monochrome mode filters out colour, helping to bring out light and shadows, and give photos more mood and atmosphere.

Open  **Camera > More > Monochrome**, and then touch  to take photos in black and white.



Use Portrait Mode to Shoot Like a Pro

Go to  **Camera** > **Portrait**, adjust the following settings, then touch  to take a portrait.

Blur and lighting effects: Touch the  icon in the viewfinder and select a blur or lighting effect.

 A light source (such as a neon or street light) in a relatively well-lit background will contribute to better results. Taking photos at long distance will reduce the effect.

Beauty effect:

- Shoot using the rear camera: Touch  in the viewfinder and drag the slider to adjust beauty settings. A larger value will produce a more distinct beauty effect.
 - Shoot using the front camera: Touch  in the viewfinder and drag the slider to adjust beauty settings. A larger value will produce a more distinct beauty effect. You can also touch **HDR** at the top of the screen to enable AI HDR to refine details in both the well-lit and poorly-lit areas of the photo.
-  To disable the beauty effect, touch  in the viewfinder and drag the slider to the lowest level.

Use Panorama Mode to Take Panoramic Photos

Panoramas provide a wider viewing angle than ordinary photos, letting you take sweeping landscape shots.

To capture a panorama shot, the camera takes multiple photos of objects within our visual field and stitches them together into a single photo.

- i When taking a panorama, find a wide, open space that is some distance away from the subject and try to avoid backgrounds that are all in one colour.

- 1** Go to  **Camera > More > Panorama**.
- 2** Touch  at the bottom of the screen to configure the shooting direction.
- 3** Hold your Phone steady, and then touch  to start shooting. Slowly move the Phone in the direction indicated, holding the device steady and ensuring that the arrow stays level with the centre line.
- 4** Touch  when you are finished. The camera will automatically stitch the photos together to create a panorama.



Custom Shooting Modes

Want to discover new ways of using your camera besides the preset functions? You can download or delete shooting modes based on your needs.

Download more shooting modes: Open  **Camera > More > Download**. Select the shooting modes to download, and touch **ADD**.

Update shooting modes: To update shooting modes, go to the **More** screen. The shooting modes with available updates will have red dots next to them. You can follow the onscreen prompts to update them.

Delete shooting modes: Go to **More >** , and touch  to delete unneeded shooting modes.

- i To ensure that Camera works normally, preset shooting modes cannot be deleted.

Use AR lens to Shoot Interesting Photos

Use **AR lens** to make your photos fun and stand out.

Go to  **Camera > More > AR lens**.

There are several effects to choose from to make your photos stand out:

- **3D Qmoji:** Touch **3D Qmoji**, and select an animated Qmoji. The Qmoji will then mimic and act out your facial expressions and actions accordingly. Touch  to record, or touch , then touch and hold  to create your own personalised Qmoji.

Use Pro Mode to Take Scenic Photos

Want to make your scenic photos more vibrant and interesting? Use Pro mode to take unique and personalised scenic photos.

Go to  **Camera** > **Pro** to enter Pro mode.

Select a metering mode based on the shooting subject: Touch , and select a metering mode.

Metering Mode	Application Scenario
Matrix	Broad landscapes and seas
Centre	The subject is in the centre of the picture, and stands out from the background.
Spot	The subject to be highlighted in the picture is relatively small, such as a flower or a tree.

Adjust brightness based on the shooting environment:

- **Adjust ISO:** Touch , and drag the ISO slider to adjust its value.
 -  To avoid excessive noise, the recommended ISO is below 400. The recommended ISO for the daytime is between 100 and 200 and around 400 for night scenes.

- **Adjust the shutter speed:** Touch  (shutter speed), and drag the shutter speed slider to your desired speed.
 -  The recommended shutter speed for static scenes (such as mountains) is between 1/80 and 1/125, and faster for moving subjects (such as waves). For best results, use a tripod when shooting a moving subject.

- **Adjust exposure compensation:** Touch , and drag the EV slider to your desired value.

Adjust AWB: Touch , and drag the AWB slider to your desired value.

- 
 - When shooting under sunlight, you can select . In a weak light environment, you can select .
 - Touch  to adjust the colour temperature. If you want to give your photo a cosy, nostalgic tone, increase the K value. For a cold, calm or futuristic tone, lower the K value.

Adjust AF based on the shooting subject: Touch , and drag the AF slider to your desired value.

Focusing Mode	Application Scenario
AF-S mode	Static scenes (such as mountains)
AF-C mode	Moving scenes (such as flowing water and waves)
MF mode	Protruding objects (such as a close-up of a flower)

Hold your device steady when shooting: Touch  and enable **Horizontal level**. After this feature is enabled, two horizontal guiding lines will appear on the viewfinder. When the dotted line overlaps with the solid line, the camera is horizontally aligned.

Save RAW format pictures: Go to  > **Resolution**, and enable **RAW format**. After this feature is enabled, photos taken in Pro mode will be saved in both RAW and standard JPG formats.

-  • Some options in Pro mode may change after you modify settings.
- The aforementioned recommended settings are for reference only. You may adjust them based on the actual usage conditions to achieve your desired effect.

Use Pro Mode to Capture Portraits

Want to take more professional portraits? The Pro mode allows you to adjust your camera settings to shoot professional portraits.

Open  **Camera** > **Pro**.

Select a Metering mode:  or  mode is recommended for taking portraits. Place your shooting subjects (their faces for example) in the centre of the viewfinder.

Adjust brightness based on the shooting environment

- **Adjust ISO:** To avoid excessive noises, it is recommended that you adjust the ISO to a low level when shooting portraits. You may adjust the ISO based on the actual shooting environments.

Shooting Environment	Recommended ISO
Outdoors	Between 100 and 200
Indoors	Around 400
Night scenes	Between 400 and 800

- **Adjust shutter speed:** The shutter speed should be slow if the ambient light is low and fast when the ambient light is strong. The recommended shutter speed for static portraits is between 1/80 and 1/125. To shoot moving subjects, select a shutter speed at or above 1/125.
- **Adjust EV compensation:** You may increase the EV compensation if the light on the subjects or background is low, and decrease the EV compensation if there is too much light.

Adjust AWB: Select AWB depending on the lighting conditions. When shooting under sunlight, you can select . In a low light environment, you can select .

Adjust Focus: To better highlight a subject, it is recommended that you use manual focus (MF) when shooting portraits. In the viewfinder, touch to focus on the part (the subject's face for example) you want to highlight.

- In Pro mode, some settings may change after you change a setting. You may adjust them based on your actual needs.
- The recommended settings above are for reference only. You may adjust them based on the actual usage conditions to achieve your desired effect.

Connect and Share

Use NFC to Quickly Establish Connections between Devices

Place the NFC detection areas of your two devices close together to quickly establish a Bluetooth or Wi-Fi connection between them. You can also use this method to establish a Wi-Fi Direct connection or to share a Wi-Fi hotspot without the trouble of searching for devices, pairing, and manually entering connection details.



For example, when pairing Bluetooth devices, enable NFC, Huawei Beam, and Bluetooth on both devices. Open the Bluetooth pairing screen on both devices and place the NFC detection areas of devices close together. When the transmitting device plays an audio prompt and the transmitting

screen shrinks, follow the onscreen instructions and touch the screen on the transmitting device to establish a Bluetooth connection.

- If there is a **Read and write/P2P** switch on the NFC screen, ensure that it is also enabled.

Features may vary depending on your network provider.

Use Huawei Share to Quickly Share Files between Huawei Devices

You can use Huawei Share to quickly transfer photos, videos and other files between Huawei devices. Huawei Share uses Bluetooth to detect other nearby Huawei devices and then uses Wi-Fi Direct to quickly transfer files without using mobile data.

- Huawei Share uses Wi-Fi and Bluetooth to transfer data. When Huawei Share is enabled, Wi-Fi and Bluetooth are both automatically enabled.

Use Huawei Share to send files: Select the files you want to share and then touch **Share**. To send files, select the receiving device from the list of nearby devices and confirm.

Use Huawei Share to receive files: Swipe down from the status bar to open the notification panel, and then touch  to enable Huawei Share. Touch **ACCEPT** when the file transfer notification is displayed. Received files are saved by default to your **Files's Huawei Share** folder.

- No confirmation is required if the two Huawei devices have been logged in using the same HUAWEI ID.

One-Touch Printing with Huawei Share

How do I quickly print travel photos, work files, or my children's homework from my device? Experience the ease of one-touch printing with Huawei Share.

- Huawei Share now supports one-touch printing for images and PDF files.
 - For a list of supported printers, touch **Learn more** in the Huawei Share section (access this section by touching the Share icon on the picture or PDF you want to share), swipe left on the screen, then touch **What printers are supported?** to see the list.

Huawei Share's one-touch printing feature is convenient and easy to use. To start using it, swipe down from the status bar to display all shortcuts, and enable **Huawei Share**, then follow the steps below to pair with different types of printers:

• Wi-Fi printer/Wi-Fi Direct printer:

- 1 Power on the printer, and make sure that it connects to the same network as your device, or that Wi-Fi Direct is enabled.
- 2 Preview the file you want to print on your device, and then touch **Share**. Once the printer has been discovered, touch its name, and adjust specifications on the preview screen. Then simply touch **PRINT** to print.

- **Bluetooth printer:** Power on the printer, preview the file you want to print on your device, and then touch **Share**. Once the printer has been discovered, touch its name, and adjust specifications on the preview screen. Then simply touch **PRINT** to print.

-  When pairing the Bluetooth printer for the first time, start by making sure your device can find the printer, then press the power button on the printer for 1 second to ensure successful pairing.

Share Your Mobile Network with Other Devices

You can share your mobile data with your friends.

Use personal hotspot to share mobile data: Open  **Settings** and go to **Wireless & networks** > **Personal hotspot**. Set **Device name** and **Password**, then enable the hotspot to use it.

-  **Set data limit for shared mobile data:** Go to **Settings** > **Wireless & networks** > **Personal hotspot** > **More**, and touch **Data limit** to set the data limit for a single session. When this limit is reached, your device will automatically disable the hotspot.

Use Bluetooth to share mobile data: Connect your device to another device using Bluetooth, then enable Bluetooth tethering to share your mobile data. Open  **Settings**, go to **Wireless & networks** > **Personal hotspot** > **More**, and enable **Bluetooth tethering**. On the **Bluetooth** settings screen of the paired device, touch  next to the paired device, then enable **Internet access** to establish an Internet connection and share your mobile data.

Use USB to share mobile data: Use a USB cable to connect your device to a computer. Open  **Settings**, go to **Wireless & networks** > **Personal hotspot** > **More**, and enable **USB tethering** to start sharing your mobile data.

-  Depending on your computer's operating system, you may need to install device drivers or establish the relevant network connection on your computer before using this feature. Refer to your computer's operating system guide for more information.

Manage Your Phone

Use Password Vault

Password vault saves and fills in your passwords, allowing you to log in to apps on your device more conveniently and securely.

Enable or disable Password vault: Password vault is enabled by default. After you update your device, enable Password vault by performing the following operations:

- 1 Enter the lock screen password to access the Password vault settings. Open  **Settings**, and go to **Security & privacy** > **Password vault**.
- 2 Enter your lock screen password to access the **Password vault** screen.
- 3 Enable **Password vault**. When you log in to an app for the first time or after logging out, select **SAVE**, and your username and password will be saved. Next time you log in, use the method you picked, for example Face unlock, to automatically fill in your username and password to log in to the app.

- 4** Enable or disable **Autofill settings** for individual apps. If the autofill feature is enabled for an app, you can use your face, fingerprint, or lock screen password to fill in the password when you log in. If this feature is disabled, your username and password must be entered manually.

 Password vault does not work for certain apps due to version limitations.

Enable App Lock

App lock allows you to set a password for your important apps. Once you restart your device or unlock the screen, you will be asked to enter your App lock password when opening these apps. App lock adds an extra layer of protection for your private information and prevents unauthorised access to important apps on your device.

Enable App lock: Open  **Settings**. Go to **Security & privacy > App lock**. When you first access App lock, select **Lock screen password** or **Custom PIN** as your **App lock** verification password. Enter your password as prompted and on the **App lock** screen, toggle on the switch for the apps you want to lock.

Set your App lock password: Touch  on the **App lock** screen, then touch **Password type**. Select **Lock screen password** or **Custom PIN**.

Enable PrivateSpace

With PrivateSpace, you can save your private information in a space that can only be accessed with your fingerprint or by a password you have set.

 You can add up to three user accounts (including the **PrivateSpace** and **Users** accounts) on your device. If you have already added three users under **Settings > Users & accounts > Users > Add user**, you cannot create your **PrivateSpace**.

Enable PrivateSpace: If you are using PrivateSpace for the first time, open  **Settings**, go to **Security & privacy > PrivateSpace > Enable**, and follow the onscreen instructions to create your PrivateSpace.

 You can create only one PrivateSpace.

Switch directly between MainSpace and PrivateSpace: From the lock screen, you can directly switch between spaces, using your fingerprint or the applicable passwords. After restarting your device, you must enter MainSpace with the password first, before switching to PrivateSpace from the lock screen.

Enter PrivateSpace: You can enter your PrivateSpace directly from the lock screen using your fingerprint or password. Alternatively, from MainSpace, open  **Settings**, and go to **Security & privacy > PrivateSpace > Log in** to enter your PrivateSpace.

Exit PrivateSpace: After entering your PrivateSpace, open  **Settings**, go to **Security & privacy > PrivateSpace > Exit**. When you exit your PrivateSpace, all system memory used by the PrivateSpace is freed for other tasks. You can still switch back to PrivateSpace as needed.

Delete PrivateSpace: Deleting your PrivateSpace will permanently delete all apps and data stored in PrivateSpace. This data cannot be restored. You can delete your PrivateSpace through the following ways:

- From MainSpace, open  **Settings**, go to **Security & privacy > PrivateSpace**, and then go to  **> Delete PrivateSpace**.
- From PrivateSpace, open  **Settings**, and go to **Security & privacy > PrivateSpace > Delete**.

Set Your Home Screen Wallpaper

Tired of default wallpapers? Set a photo you like as your home screen wallpaper to personalise your home screen.

Open  **Settings**, and then go to **Home screen & wallpaper > Wallpaper**. You can:

Set a picture as your home screen wallpaper: Touch **Gallery** or select a preset wallpaper in your device, and follow the onscreen instructions to select **Lock screen**, **Home screen** or **Both**.

Set a photo as your wallpaper from Gallery: Have a great photo you want to set as your


wallpaper? In  **Gallery**, open the photo that you like, go to  **> Set as > Wallpaper**, and follow the onscreen instructions to set the photo as your home screen wallpaper.

Manage Your Home Screen Widgets

Want to quickly add widgets such as screen lock, weather, notepad, clock, contacts, or calendar to your home screen? You can add, move or delete home screen widgets to tidy up your home screen and ease your usage experience.

Add widgets: Pinch in with your fingers on the home screen to enter home screen editing mode.

Touch **Widgets**, touch and hold a widget and drag it to an empty area on the home screen, or touch the widget you want.

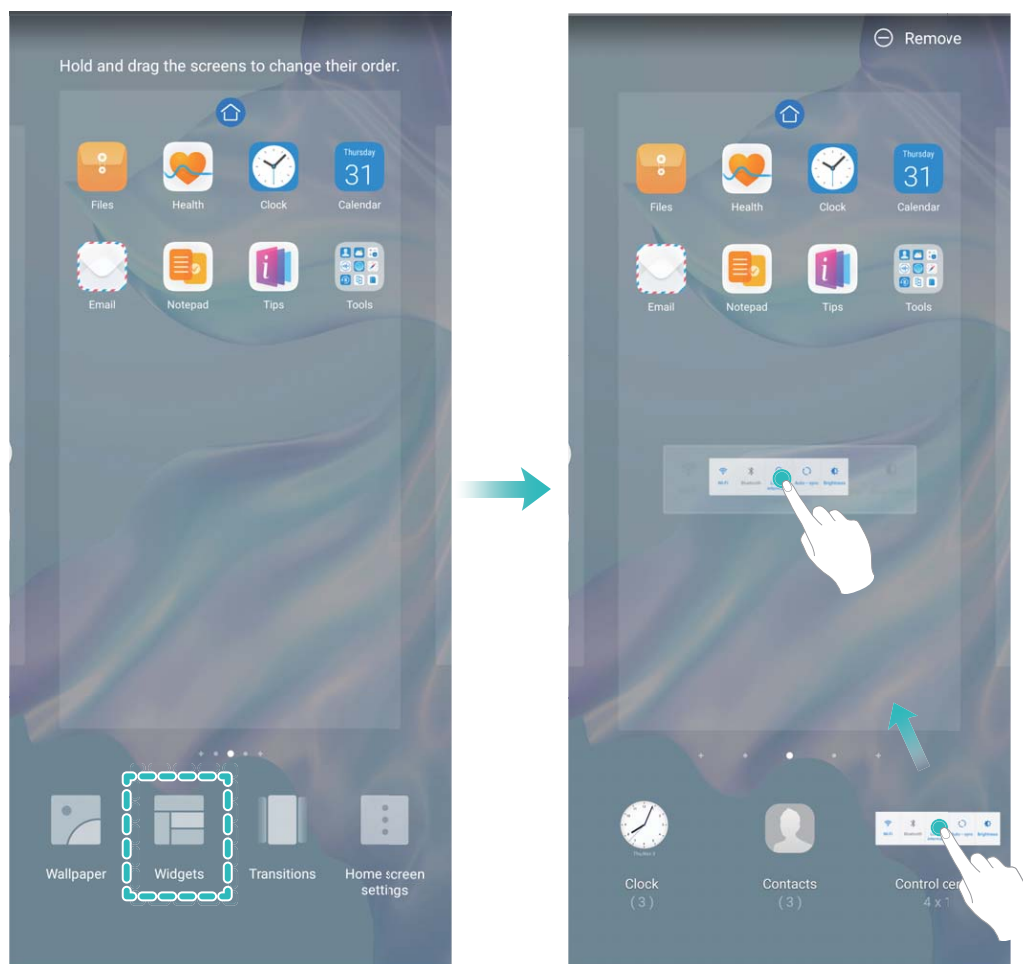

- i** Check that there are enough empty spaces on the home screen for the widget. If there is not enough space, add an empty screen page or free up some space on the current home screen page.

Delete widgets: Touch and hold a widget on the home screen until your device vibrates, and then select **Remove**.

Move widgets: Touch and hold a widget on the home screen until your device vibrates. Drag the widget to any position on the screen.

Use App Drawer to Store Apps

Want to store your apps in one location on your home screen to make your home screen look cleaner? You can enable app drawer on your home screen to store all your apps and free up space on your home screen.

Open  **Settings**, go to **Home screen & wallpaper > Home screen style**, and select **Drawer**. If you want to switch back to a standard home screen, select **Standard**.

- i** **Add an app icon from app drawer to the home screen:** After you enable app drawer, touch  on the home screen to enter the app list. From the app list, touch and hold the app icon that you want to add until your Phone vibrates, and then drag it to the desired position on the home screen.

Enable Memory Cleanup

Your device may slow down over time as your storage space gets smaller. Use Memory cleanup to free up storage space, improve system performance, and keep your device running smoothly.

Open  **Phone Manager**, then touch **Cleanup** to clean up memory and clear the cache to optimise performance. If your storage space is still low, perform a deep clean to free up additional storage space.

New Device

New Device Configuration

Connecting to the Internet

Connect to Wi-Fi networks effortlessly with your device.

Connecting to a Wi-Fi network

- 1 Swipe down from the status bar to open the notification panel.
- 2 Touch and hold  to open the Wi-Fi settings screen.
- 3 Switch on **Wi-Fi**. Your device will list all available Wi-Fi networks at your location.
- 4 Select the Wi-Fi network you want to connect to. If you select an encrypted network, you will also need to enter the Wi-Fi password.

Connecting using mobile data

-  Before using mobile data, ensure that you have a data plan with your network provider to avoid incurring excessive data charges.
- 1 Swipe down from the status bar to open the notification panel.
 - 2 Touch  to enable mobile data.
 -  To save battery power and reduce data usage, disable your mobile data connection when you don't need it.

Enrol Your Facial Information and Enable Face Unlock

-  • Face unlock can only be used when the owner account is logged in. It is not supported by user and guest accounts, or by PrivateSpace.
 - Face unlock is not available if the lock screen password has not been entered for at least three consecutive days, or if your device has been remotely locked or restarted.
 - When using Face unlock, keep your eyes open, and look straight at your device from a distance of 20–50 cm (about 8–20 inches). Your device may be unable to scan your face accurately if you are in an extremely dark environment or under direct lighting.
 - Currently, only one face can be enrolled. You can delete the current facial data and re-enrol your face.
- 1 Open  **Settings**. Go to **Security & privacy > Face recognition**, then enter your lock screen password.
 -  If you haven't set a lock screen password, follow the onscreen instructions to do so.
 - 2 If you select **Enable pick up to wake**, the screen will turn on and unlock when you pick up your device and hold it in front of your face. If you do not need this feature, do not select the option. Touch **Get started** and enrol your face.

3 Face unlock modes:

- **Direct unlock:** On the **Face recognition** screen, touch **Unlock device** and select **Direct unlock**. When you turn the screen on, your device will automatically recognise your face and directly unlock the screen.
- **Slide to unlock:** On the **Face recognition** screen, touch **Unlock device** and select **Slide to unlock**. Once your device has recognised your face, slide on the lock screen to unlock it.
-  If you have enabled **Show notifications**, your device will hide notification details on the lock screen and display them only when the owner's face has been recognised.
- If you have also enabled **Access App lock**, you can access locked apps when your device recognises your face.

Pick Up to Unlock

Open  **Settings**, and go to **Security & privacy > Face recognition**. When enrolling facial data, select **Enable pick up to wake**, and set the Face unlock method to **Direct unlock**. Once the setup is complete, you can simply raise your device to unlock the screen, without a password or fingerprint.

If you haven't selected **Enable pick up to wake** when enrolling facial data, you can open  **Settings**, go to **Security & privacy > Face recognition**, and set the Face unlock method to **Direct unlock**. Then, open  **Settings**, go to **Smart assistance > Motion control > Pick up**, and select **Wake device**.

Connect to Wi-Fi

Connecting your device to a Wi-Fi network is an effective way to preserve mobile data.

-  To avoid potential security risks (such as unauthorised access to your personal data and financial information), please exercise caution when connecting to a public Wi-Fi network.



Connect to Wi-Fi: Open  **Settings**, go to **Wireless & networks** > **Wi-Fi**, and enable **Wi-Fi**. Select the Wi-Fi network that you would like to connect to. Follow the onscreen instructions to enter the password or to complete the authentication, depending on the network settings. Alternatively, you can scroll to the bottom of the Wi-Fi menu, touch **Add network**, and follow the onscreen instructions to add a network hotspot by entering its name and password.

Enable 5G


-  • When two SIM cards are inserted, only the default SIM card will support 5G service. The other card will only support 4G/3G/2G service.
- 5G service may be unavailable in certain areas due to network interference.

- 1** Contact your network provider to enable 5G service.
- 2** Open  **Settings**, go to **Wireless & networks** > **Mobile network**, and enable **5G** for the default SIM.

Introduction to SuperCharge

SuperCharge uses SCP to link together your device and charger and ensures smart, fast, and safe charging by intelligently adjusting the charging voltage and current based on the battery level of your device.

-  Use the charger and USB cable that came with your device. Using other chargers or USB cables may cause repeated restarts, slow charging, overheating, or other undesirable situations.

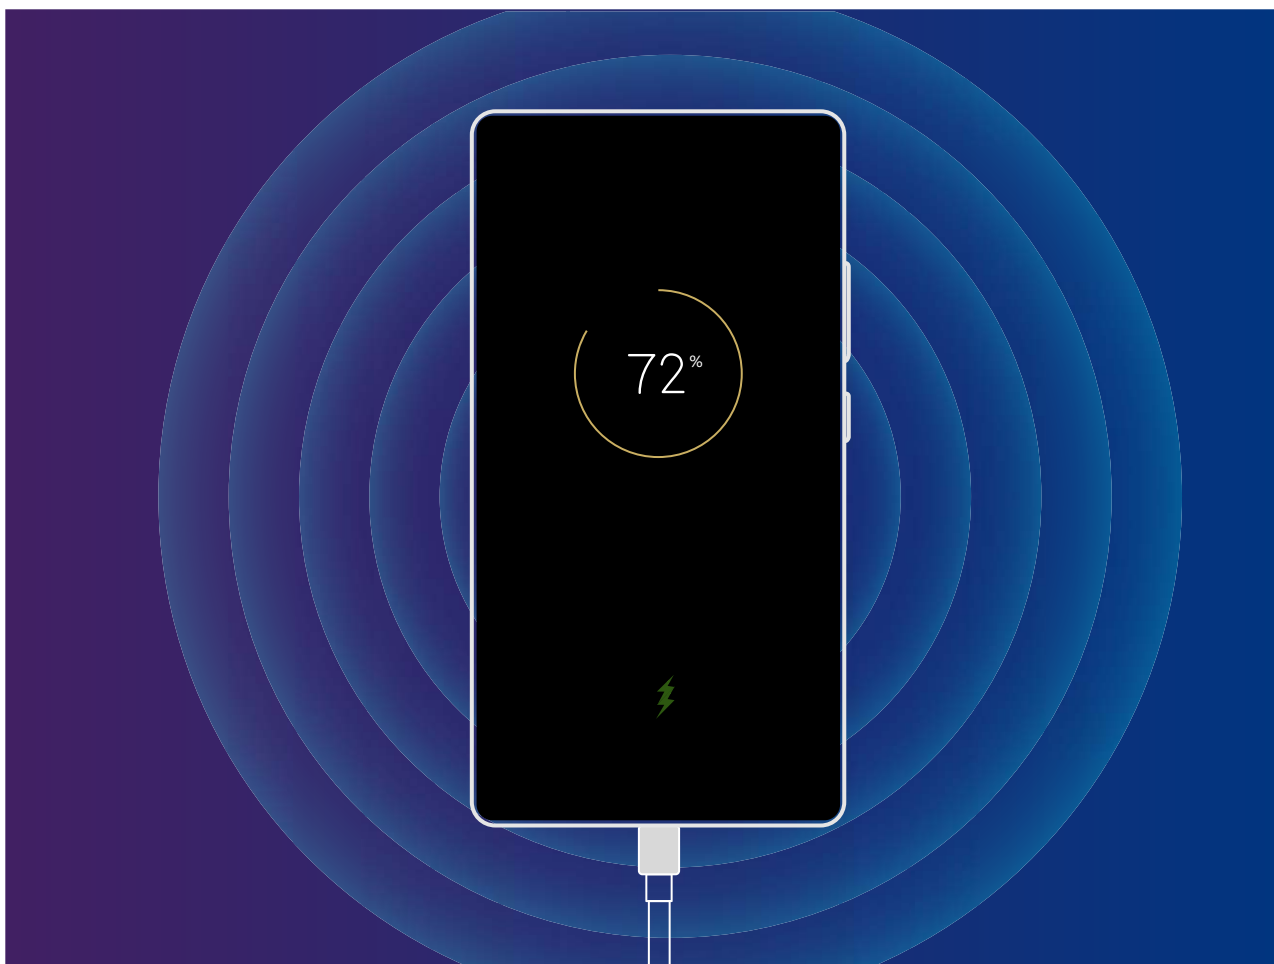

Gestures and Operations

Smart Recognition

HiVision: Start Scanning to Learn More

Want to stick to a healthy diet and keep fit? Wish you could understand foreign logos, road signs, and restaurant menus while travelling abroad? Want to quickly get product information for comparisons and to make purchases faster? Use HiVision to get all these done fast and easily.

HiVision can provide you with the following features:

- **Scan food:** You can scan food to determine the weight, calories, and nutrition facts.
 - **Identify objects:** Scan to identify road signs or famous paintings. A card with relevant information about the geographical locations or the painting will be generated for you.
 - **Shop:** Scan the objects you like to get purchase recommendations.
 - **Translate:** Scan words or phrases in a foreign language for a quick online translation, making your trip abroad a breeze.
 - **Scan codes:** Scan QR codes or barcodes to add contacts or acquire product information.
-  • This feature requires access to the Internet to identify objects, scan codes, determine calories in food, shop, and translate.
- This feature is only supported in some countries and regions.

Read QR Codes and Barcodes

- 1 Swipe down on the home screen, and touch  to open **HiVision**.
- 2 Touch  and place the QR code or barcode within the scan frame to acquire information.
- 3 From the results screen, you can:
 - Touch  to copy the information to the clipboard and paste anywhere you like.
 - If the QR code contains contact information, touch  to add the information to your **Contacts**.

Scan to Translate Effortlessly

HiVision can help you quickly translate foreign text.

-  • This feature requires an Internet connection. Connect to a Wi-Fi network to avoid incurring unnecessary data charges.
- This translation feature currently supports Chinese, English, Japanese, Korean, French, Russian, Spanish, Italian, German, and Portuguese.
- 1 Once your device is unlocked, swipe down from the centre of the home screen and touch  to open **HiVision**.

- 2 On the **HiVision** screen, touch  , select the source and target languages, frame the text in the viewfinder, and wait for it to be translated.
- 3 You can touch  to copy the translation and paste it anywhere you like.

Scan Products

When you encounter an unknown item, you want to buy but can't find it. After scanning goods, you can get the purchase recommendations of similar items, which is convenient for you to buy favourite things.

-  This feature requires an Internet connection. Connect to a Wi-Fi network to avoid incurring unnecessary data charges.
- 1 Once your device is unlocked, swipe down from the centre of the home screen, and touch  to open **HiVision**.
 - 2 On the HiVision screen, touch , then you can shop by scanning a product or by taking a screenshot.
 - Take a screenshot to purchase: Frame the item in the viewfinder, then touch  to take a screenshot. The system will automatically recognise and recommend similar items.
 - Scan the product to purchase: Frame the item in the viewfinder, the system will automatically scan and recommend similar items.

Scan to Instantly Recognise Objects

Find more information about key landmarks during a journey or favourite paintings in an exhibition. Scan any picture using HiVision to find out more.

HiVision provides you with relevant information to enhance your experiences. Instructions:

- 1 Once your device is unlocked, swipe down from the middle part of the home screen to display the global search box, then touch  to enable **HiVision**.
- 2 On the **HiVision** screen, touch , and frame the arts in the viewfinder. HiVision will automatically identify the arts and display detailed information cards for that arts.

Scan Food to Acquire Calorie Information

Ever just start wondering about how to select healthy food and keep slim? Scan the food to get the weight, the calorie, and the nutrient information using **HiVision**.

-  This feature requires an Internet connection. Connect to a Wi-Fi network to avoid incurring unnecessary data charges.

Perform the following to try it out:

- 1 Once your device is unlocked, swipe down from the middle part of the home screen, and touch  to open **HiVision**.
- 2 On the **HiVision** screen, touch , and make sure the food is centred in the frame, and the weight, the calorie, and the nutrient information will be shown.

HiSearch: Search for Matching Text and Images

HiSearch can be a handy search tool to locate the apps and files you want.

HiSearch allows you to search through settings, files, contacts and notes while keeping a record of your search history.

- 1** Once your device is unlocked, swipe down from the middle part of the home screen to open **HiSearch**.
- 2** Enter an app or file name to run a search, then touch  in the search results to easily find the location of the app on the home screen.
- 3** Touch the  icon on the **HiSearch** interface to review **Search scope** or **Check for updates** here.

Home Screen

Navigation Bar

Use the Recent Key to Manage Background Apps


If you want to quickly switch to a recently used app, you might try using the Recent key. The Recent key can help you quickly switch between several recently used apps. You can also use it to close your background apps to increase your Phone's operating speed.

Touch . You can view, switch to, close, or lock recently used background apps:

- **View recently used apps:** Recently used apps will be displayed on the screen and you can check them by swiping left or right.
- **Switch to a recently used app:** Swipe left or right on the screen to find the app you want to use, and touch the app tab.
- **Close an app:** Swipe up on an app tab to close the corresponding app.
- **Close all apps:** Touch  to close all apps.

Use Shortcut Switches to Quickly Enable Frequently Used Features

Want to quickly enable or disable mobile data or hotspot? You can enable frequently used features by using shortcut switches.

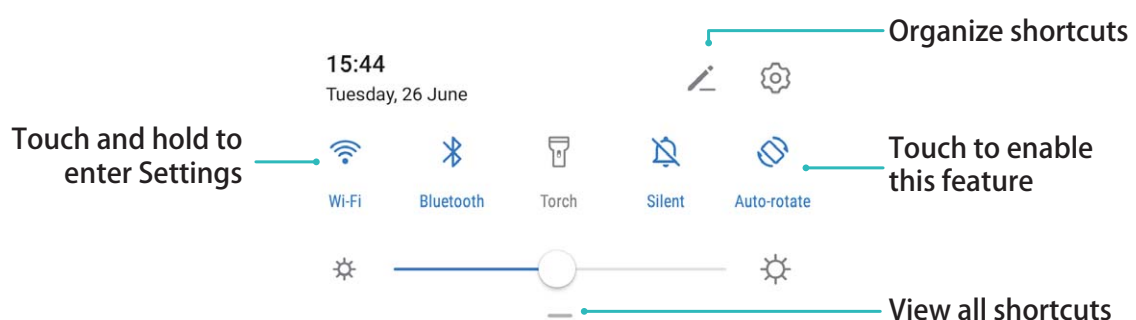

Notification Panel and Status Bar

Notification and Status Icons and Descriptions

The icons on the status bar give you a quick overview of the general status of your device, including its network connection, battery level, and any new messages received when your device is in Silent mode.

Status icons: By glancing at the status icons, you can quickly learn the status of your device, such as its network connection, signal strength, battery level, time, and more.

 The network status icons may vary by regions and service providers.

	Signal strength		No signal
4G⁺	4G+ network connected	3G	3G network connected
4G	4G network connected	H	HSPA network connected
2G	2G network connected	LTE	LTE network connected
LTE⁺	LTE+ network connected		NFC enabled
H⁺	HSPA+ network connected		Airplane mode enabled
HD	VoLTE available		Wi-Fi network connected
R	Roaming		Receiving location data from GPS
	Bluetooth enabled		Silent mode enabled
	Wi-Fi network available		Charging
	Vibration mode enabled		Battery level low
	Alarms enabled		No SIM card detected
	Battery fully charged		Headset plugged in
	Power saving mode enabled		Performance mode enabled
	Wired or wireless projection in use		Super charging
	Quick charging		Eye comfort mode enabled
	Do not disturb mode enabled		USB cable connected
	Data saving mode enabled		Bluetooth power
	Hotspot enabled		Phone Manager reminder
	Unstable signal		Can't connect a call on current network
	Select-to-speak enabled		Screen time management enabled

Notification icons: When there is a new message, notification or reminder on your device, the relevant icon will be displayed in the status bar.


	Missed calls		New emails
	Downloading data		New voicemails
	Events reminder		Uploading data
	Synchronising data		Memory full
	Sign-in or synchronisation problem		Synchronisation failed
	VPN connected		More notifications

Open the Notification Panel to Get Important Information

Check the notifications and the operating status of your device on the status bar.

When there is a notification reminder, you can turn on the screen and swipe down from the status bar to view the notification.

Access notification panel when the screen is unlocked: Swipe down from the status bar to open the notification panel. You can turn on or off shortcut switches, or touch notifications to view the details.

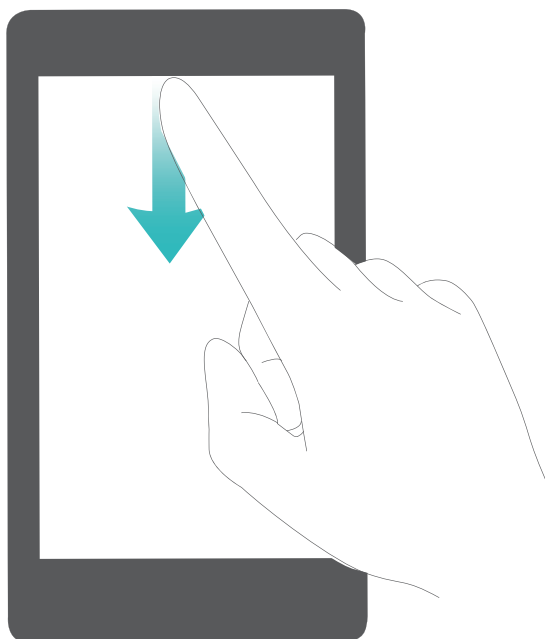

Disable App Notifications

Open  **Settings** and touch **Notifications**. From here you can:

- **Block notifications from an app:** Select the app, then disable **Allow notifications**.

- **Block notifications from multiple apps:** Touch **Batch management**, then disable **All**.

 To block notifications from an app, you can also swipe down from the status bar to open the notification panel, touch and hold an app notification, then disable **Allow notifications**.

Customise Notification Settings

Customise the notification settings to use your device the way you want.

Open  **Settings**, then go to **Notifications > More notification settings**. From here you can:

- **Enable Notifications turn on screen:** Enable **Notifications turn on screen** to set the screen to turn on when notifications are received.

Screen Lock and Unlock

Set a Lock Screen Password to Protect Your Privacy

Your Phone stores a lot of sensitive information, such as personal photos, contact information, banking apps (for example, Alipay). Set a lock screen password so that a password is required each time you unlock your Phone. A lock screen password helps to protect your private information if your Phone is lost or accessed by an unauthorised user.

Set a lock screen password: Open  **Settings**, go to **Security & privacy > Lock screen password**, and set the type of lock screen password you prefer.

- **Set a PIN:** A PIN number is a sequence of digits. Entering a PIN to unlock your Phone is quick and simple. For better security, use a long sequence of random numbers as your PIN. Go to **Set lock screen password**, follow the prompts to set up a PIN. Alternatively, touch **Change unlock method**, and set **4-digit PIN** or **Custom PIN**.
- **Set a pattern:** Unlock your Phone by drawing a preset pattern on the screen. For better security, use a pattern that includes overlapping line segments. Go to **Set lock screen password > Change unlock method > Pattern** and draw the same pattern twice. The pattern must connect at least 4 dots.
- **Set a password:** A password made up of numbers, letters, and special characters is more secure than a PIN or pattern. For better security, use a password with 8 or more characters that includes numbers, letters, and special characters. Be sure to memorize the password so that you don't get locked out of your Phone if you forget it. Go to **Set lock screen password > Change unlock method > Password**, follow the prompts to set up a password.
- **Unlock your device using a smart band:** If your device supports unlocking with a smart band, the screen will automatically light up when the band comes within 80 cm of your device. Swiping on the screen of your Phone will instantly unlock the device. Touch **Smart lock**, and follow the onscreen prompts to complete the setup.

- **Unlock your device using a fingerprint:** If your device supports fingerprint unlock, this is the recommended unlock method. Using a fingerprint is a secure and quick way to unlock the device. After setting a lock screen password, touch **Add** in the dialog box that pops up and follow the onscreen prompts to enrol your fingerprints.
- **For security reasons, please do not disable the lock screen password:** A lock screen password prevents unauthorised access to your device. For the security of your device, do not select **Disable lock screen password** as the screen lock method.
- **Regular password prompts help you to remember your password:** If you have not entered your screen lock password for 3 days, the system will require that you enter the password to unlock your device.

Lock the Screen to Quickly Secure Your Phone

If you don't use your Phone for a set period of time, the screen will turn off and lock. As long as the screen stays on, you can use your Phone without needing to unlock the screen. Lock your screen when you are not using your Phone to protect your privacy and prevent mistaken inputs.

- Set a lock screen password to help protect your privacy. You can lock your device in the following ways:

Lock the screen instantly with the Power button: Press the Power button to lock the screen at any time.

Lock the screen with one-touch screen lock: Pinch two fingers together on the home screen to enter the editing screen. Touch **Widgets > Screen Lock** and add the **Screen Lock** widget to your home screen. This helps reduce wear and tear on your power button. After leaving the home screen editing mode, touch the **Screen Lock** widget to instantly lock your screen. To lock your screen this way, first switch to the home screen page where the **Screen Lock** widget is located.

Enable Always Display Information

Always display information lets you check a host of information such as the date, time, battery level, and notifications without ever turning the screen on.

Enable Always display information: Open  **Settings**, go to **Home screen & wallpaper > Always on display**, and toggle on the **Always on display** switch.

Set schedules for Always display information: You can set your device to enable Always display information during certain time periods each day. When always display information is disabled, open

 **Settings**, go to **Home screen & wallpaper > Always on display**. Configure the **Start time** and **End time** as needed.

Go Back to Basics with Simple Mode

Does your home screen look cluttered with app icons and small text? Simple mode maximises the system volume and displays larger icons and fonts on the home screen, adopting a more concise layout which is easy to navigate.

Open  **Settings**, go to **System > Simple mode**, and touch **Enable**.

In Simple mode, you can:

- **Edit home screen icons:** Touch and hold any icon to drag or uninstall certain non-system apps.
- **Exit Simple mode:** Touch **Settings** and select **Exit Simple mode**.

 In **Simple mode**, go to **Settings > More settings > System > Reset > Reset all settings**. You will be directed to the default system home screen and all your settings in **Simple mode** will be reset.

Home Screen Management

Manage Home Screen Icons

Move an app icon or folder: On the home screen, touch and hold an app or folder icon until your device vibrates, then drag it to any position on the home screen.

Delete an app icon: On the home screen, touch and hold the icon of the app you want to uninstall until your device vibrates, then touch **Uninstall**.

 To ensure that the system runs normally, some pre-installed system apps cannot be uninstalled.

Lock the home screen layout: Open  **Settings**, go to **Home screen & wallpaper > Home screen settings**, and enable **Lock layout**.

Create a folder: On the home screen, touch and hold an app icon until your device vibrates, then drag it on top of another app icon. The two icons will be placed in a new folder.

Delete a folder: Open a folder, touch , deselect all the apps, then touch **OK**. The folder will be deleted and all app icons in the folder will be moved to your home screen.

Rename a folder: Open a folder and touch the folder name to enter a new name.

Add or remove app icons from a folder: Open a folder and touch . Select the apps you wish to add to the folder, deselect those you wish to remove, then touch **OK**.

 Another way to remove an app icon from a folder is to touch and hold the icon in the folder until your device vibrates, then drag it to an empty space on the home screen.

Manage Your Home Screen

Too many icons on your home screen? You can add a new page to your home screen and customise it to your liking.

Pinch in with your fingers on the home screen to enter home screen editing mode. You can do the following:

- **Add a new screen page:** Touch  at the left or right side of the screen to add a new screen page.
- **Delete an empty screen page:** Touch  to delete the page.

 Screen pages with app icons or widgets on them cannot be deleted.

- **Modify screen page order:** Touch and hold the screen page you want to move, then drag it to the desired position.
- **Set a default home screen page:** Touch  in the upper part of the home screen to set the selected screen page as your default home screen page.

Set Your Home Screen Wallpaper

Tired of default wallpapers? Set a photo you like as your home screen wallpaper to personalise your home screen.

Open  **Settings**, and then go to **Home screen & wallpaper > Wallpaper**. You can:

Set a picture as your home screen wallpaper: Touch **Gallery** or select a preset wallpaper in your device, and follow the onscreen instructions to select **Lock screen**, **Home screen** or **Both**.

Set a photo as your wallpaper from Gallery: Have a great photo you want to set as your


wallpaper? In  **Gallery**, open the photo that you like, go to  > **Set as > Wallpaper**, and follow the onscreen instructions to set the photo as your home screen wallpaper.

Manage Your Home Screen Widgets

Want to quickly add widgets such as screen lock, weather, notepad, clock, contacts, or calendar to your home screen? You can add, move or delete home screen widgets to tidy up your home screen and ease your usage experience.

Add widgets: Pinch in with your fingers on the home screen to enter home screen editing mode.

Touch **Widgets**, touch and hold a widget and drag it to an empty area on the home screen, or touch the widget you want.

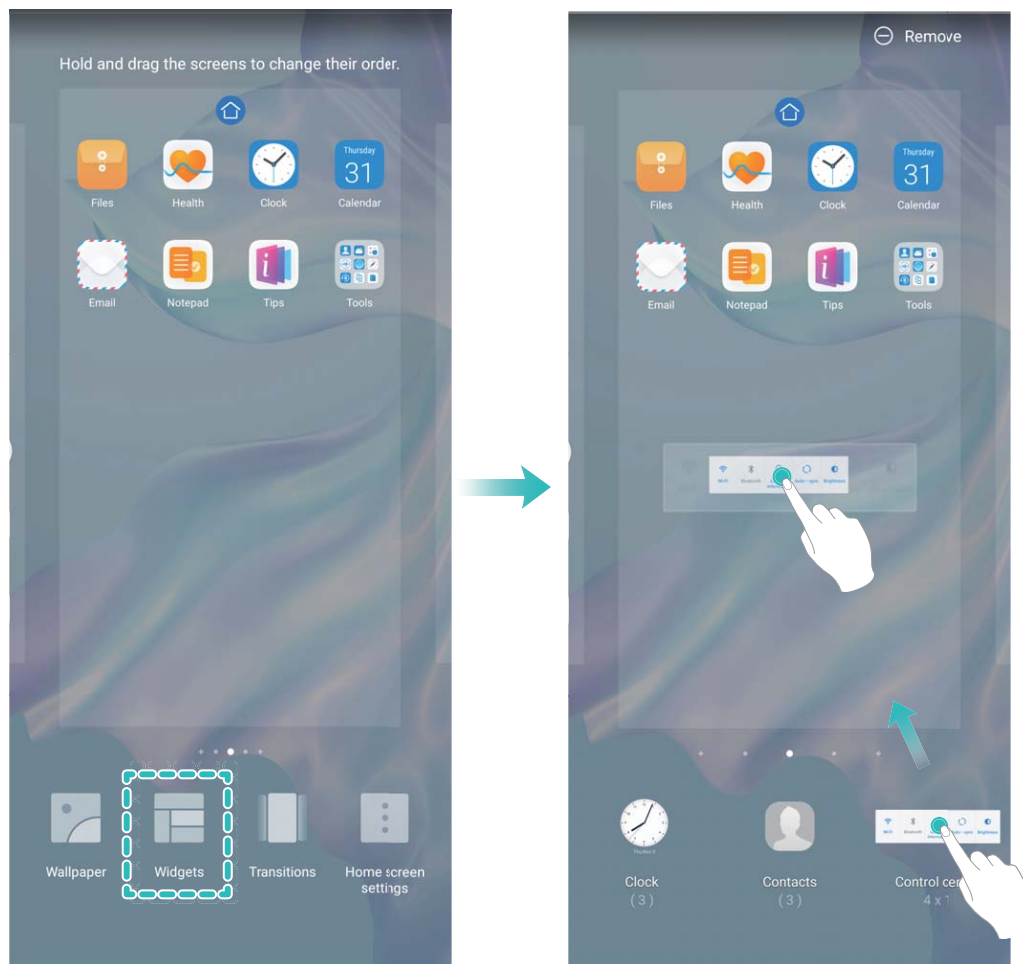

- i** Check that there are enough empty spaces on the home screen for the widget. If there is not enough space, add an empty screen page or free up some space on the current home screen page.

Delete widgets: Touch and hold a widget on the home screen until your device vibrates, and then select **Remove**.

Move widgets: Touch and hold a widget on the home screen until your device vibrates. Drag the widget to any position on the screen.

Use App Drawer to Store Apps

Want to store your apps in one location on your home screen to make your home screen look cleaner? You can enable app drawer on your home screen to store all your apps and free up space on your home screen.

Open  **Settings**, go to **Home screen & wallpaper > Home screen style**, and select **Drawer**. If you want to switch back to a standard home screen, select **Standard**.

- i** **Add an app icon from app drawer to the home screen:** After you enable app drawer, touch  on the home screen to enter the app list. From the app list, touch and hold the app icon that you want to add until your Phone vibrates, and then drag it to the desired position on the home screen.

Contacts

Managing Business Cards

Scan Business Cards to Add Them to Contacts

Open  **Contacts**, go to **Business cards** > **Scan**, and you can:

- **Scan a single business card:** Place the business card on a flat surface and adjust the camera's focus frame so that the contents on the business card are clearly displayed in the viewfinder, then touch .




- **Scan multiple business cards:** Switch to **Multiple** mode and follow the onscreen instructions to capture multiple business cards.

The information on the business cards will be automatically converted into contact information and saved in **Business cards** in your Phone.

-  To view a business card you have saved, open  **Contacts**, select scanned contacts, then go to **Details** > **View business card**.

Share Contacts Using Electronic Business Cards

Share your business card: Open  **Contacts** and touch **My card** to set your profile picture and enter your name, work address, telephone number, and other information. Then touch  and your device will automatically generate your QR code business card. You can share your business card directly using the QR code. Alternatively, touch , select a sharing method, and follow the onscreen instructions to share.

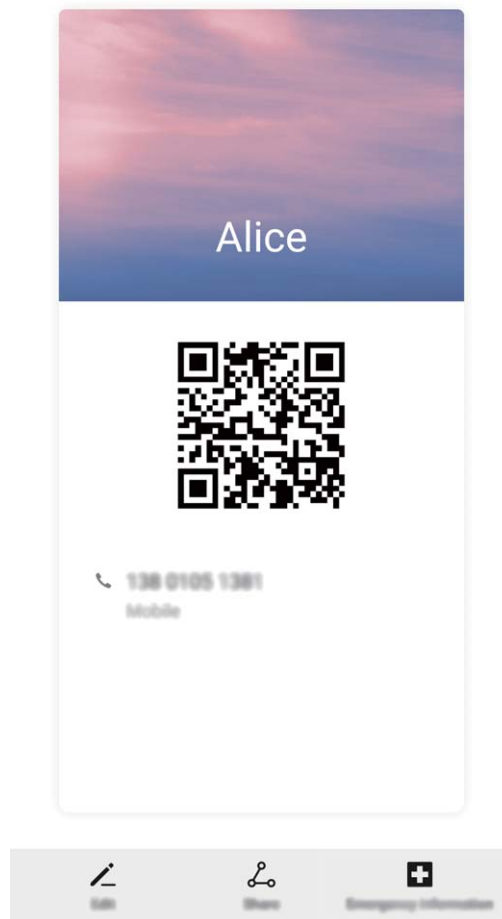

Share contacts: Open  **Contacts**, select the contact you want to share, and touch the QR code icon in the upper right corner to share the contact using the QR code. You can also touch **Share**, select a sharing method, and follow the onscreen instructions to complete the sharing process.

-  If the other party's device supports QR code analysis, they can directly take pictures of or scan QR codes to add contacts.

Search Contacts

Open  **Contacts**. Use any of the following search methods:

-  For better results, make sure your device is displaying all contacts. From the contacts list screen, go to  > **Settings** > **Display preferences** and touch **All contacts**.
- Drag the index on the right to quickly scroll through the contacts list.

- In the search bar at the top of the contacts list, enter the contact's name, initials, phone number, or email address. The search results will be displayed below the search bar. Enter multiple keywords for your search, such as "John London", to quickly find matching contacts.

Managing Contacts

Import and Export Contacts

When you switch to a new device, you'll need to transfer your existing contacts.

Open  **Contacts**, go to  > **Settings** > **Import/Export**, and then select one of the following:

- **Import contacts:** Select **Import from storage**, **Import via Bluetooth**, or **Import from SIM** and follow the onscreen instructions.
- **Export contacts:** Select **Export to storage**, **Share contacts**, or **Export to SIM** and follow the onscreen instructions. By default, .vcf files exported through **Export to storage** are saved in the root directory of your device's internal storage. Open **Files** to view exported files.

Manage Your Contacts

The Contacts app includes a host of features for managing contacts. Simplify your contacts list by viewing contacts on your device or SIM card only. Favourite contacts to find them easily.

Merge duplicate contacts: Use the **Merge duplicate contacts** function to merge duplicate contacts. From the contacts list screen, go to  > **Settings** > **Organise contacts** > **Merge duplicate contacts**. Select the contacts you want to merge and touch **Merge**.

Display contacts for different accounts: From the contacts list screen, go to  > **Settings** > **Display preferences**, and select the accounts for which you want to display contacts. You can also:

- **Enable Simple view:** Go to  > **Settings** > **Display preferences**, and enable **Simple view**.
- **View contact storage space:** Go to  > **Settings** > **Display preferences**. The **Accounts** area displays the total and available storage space on your SIM card.

Delete contacts: From the contacts list screen, touch and hold the entry you want to delete, then touch **Delete**. To delete contacts in batches, go to  > **Settings** > **Organise contacts** > **Delete multiple contacts**, select the entries you want to delete, then touch .

Manage Contact Groups

Want to send a message to a group of colleagues or host a get-together? Smart groups automatically groups your contacts by company, city, and most recent contact time, so you can quickly send a group email or message.

Create a contact group: From the groups list, touch , enter the group name (such as Family or Friends), and then touch **OK**. Follow the onscreen instructions to add contacts, and then touch .

Send a message to smart group contacts: From the groups list, from the **Smart groups** section, open a group and touch  to send a message or  to send an email.

Edit a group: From the groups list, select the group you want to edit and touch  to add a contact, or touch  to **Remove members**, **Group ringtone**, **Delete group** or **Rename**.

Delete a group: From the groups list, touch and hold a group, and then touch **Delete**.

Add Contacts to the Blocklist or Trustlist

To add a contact to the blocklist, open  **Contacts**, touch the contact, then go to  > **Block contact**. All calls and messages from this contact will be blocked.

 You can also add contacts to the blocklist in **Phone Manager**. Go to **Blocked** >  > **Blocklist**, touch , and add the contacts you want to block.

To add contacts to the trustlist, open **Phone Manager**, go to **Blocked** >  > **Trustlist**, touch , and add the desired contacts.

 When **Block all incoming calls** is enabled, all calls, including those from the trustlist, will be blocked.

View contacts in the blocklist: Open  **Phone Manager**, and go to **Blocked** >  > **Blocklist**.

View contacts in the trustlist: Open  **Phone Manager**, and go to **Blocked** >  > **Trustlist**.

Remove a contact from the blocklist: Open  **Contacts**, touch the contact you want to remove from the blocklist, then go to  > **Remove from blocklist**.

 You can also remove a contact from the blocklist in **Phone Manager**. Go to **Blocked** >  > **Blocklist**, then touch and hold the desired contact to remove it.

Remove a contact from the trustlist: Open **Phone Manager**, go to **Blocked** >  > **Trustlist**, then touch and hold the desired contact to remove it.

Erase Call and Message Records

Use Erase traces to erase call and message records for a contact to protect your privacy.

Open  **Contacts**, select a contact, and go to  > **Erase traces** > **Erase**. All of your call and message records for that contact will be erased.

Dialling

Basic Calling Functions

Make Calls

On the dialler screen of your device, enter part of the phone number, the first letter of the contact's name, or the contact's initials to find a contact.

Open  **Dialler**. From the dialler screen, enter the phone number, the first letter of the contact's name, or the contact's initials (for example, enter "jl" for John Lucas) to find a contact. Touch the contact you want to call from the list. If you are using a dual-SIM device, touch  or  to make the call. Touch  to hang up.

 You will be prompted to paste recently copied phone numbers when you enter the dialler screen.

Press the Power button to hang up: If a number has been dialled accidentally and the call screen is hidden, you can still hang up quickly. The **Power button ends call** feature hangs up the call when the Power button is pressed. On the **Dialler** screen, go to  > **Settings** > **More**, and enable **Power button ends call**.

Make Emergency Calls

In an emergency situation, if your device is powered on and in service, emergency calls can be made even if the screen is locked or there is no reception.

 The emergency call feature is subject to local regulations and your Internet service provider. Network or environmental factors may affect emergency call performance. In emergency situations, do not rely on your device as your only method of communication.

Open  **Dialler** or touch **Emergency** on the lock screen, enter a local emergency number, and touch . Strong mobile reception and an Internet connection with location services enabled will allow your location to be displayed on your device for reference.

Enable Call Waiting to Never Miss Important Third-Party Calls

Receiving an incoming call while you're already on a call? Call waiting allows you to answer the new call and then switch between the two calls.

 Some network providers may not support this feature.

Open  **Dialler**, go to  > **Settings** > **More**, and enable **Call waiting**. When receiving another call, touch  to answer the call and place your first call on hold. Touch  or the call on hold in the call list to switch between calls.

Enable Call Forwarding and Never Miss a Call

If you are unavailable to answer calls, you can set your device to forward calls to another number.

 Some network providers may not support this feature.

Open  **Dialler**, and go to  > **Settings** > **Call forwarding**. If you have a dual-SIM device, in the **SIM 1** or **SIM 2** section, touch **Call forwarding** and select a forwarding method. Enter the number you want to forward your calls to, then confirm. When call forwarding is enabled, your device will automatically forward eligible calls to the preset number.

Delete Call Logs

You can delete call logs that you no longer need.

Open  **Dialler** and touch  to hide the dialpad. You can now perform one of the following:

- **Delete a single record:** Touch and hold an entry, then touch **Delete entry**.
- **Delete multiple records:** Go to  > **Delete multiple entries**, select the entries you want to delete or **Select all**, then touch .

Set Up Video Ringtones

If you are bored with traditional incoming call ringtones, you can set a video as your call ringtone.

Open  **Dialler**, go to  > **Settings** > **Ringtone**, touch **Video ringtones**, and select a video.

Activate International Roaming for Borderless Communication

When you travel abroad for work or a holiday, you can make calls when your device is roaming without having to dial the country code.

- 1 Contact your network provider to activate the international call or roaming service.
- 2 Open  **Dialler** or  **Contacts**, and make a call.

Make Calls While Using the Internet with VoLTE

VoLTE (Voice over LTE) calls not only allow you to access the Internet while making voice or video calls, but also bring you shorter waiting times, clearer sound quality, and more flowing conversations.

Use VoLTE on a 5G network

- 1 Contact your network provider to enable the 5G and VoLTE services.
- 2 Go to  **Settings** > **Wireless & networks** > **Mobile network**. For the default SIM, enable **5G**. For the other SIM, enable **4G** and **VoLTE calls**.

 When two SIM cards are inserted, only the default SIM card will support 5G service. The other card will only support 4G/3G/2G service.

Use VoLTE on a 4G network

- 1 Contact your network provider to enable the 4G and VoLTE services.
 - 2 Go to  **Settings** > **Wireless & networks** > **Mobile network**, then enable **4G** and **VoLTE calls** for SIM 1 and SIM 2 as required.
-  The **4G** switch may be unavailable for your device due to your network provider's settings. This indicates that the 4G network is enabled by default.

Make a VoLTE video call

- 1 Ensure that both devices support the VoLTE service and have it enabled.
- 2 If a 5G network is connected, enable **5G**. If a 4G network is connected, enable **4G** and **VoLTE calls**.
- 3 Select the contact you want to call and touch  to make a video call. You can also touch  during a voice call to switch to a video call.

Use VoWi-Fi for a New Calling Experience

You can use **VoWi-Fi** to make voice and video calls in any location that has a Wi-Fi network, even when there is no mobile Phone network reception.

-  This feature must be supported by your carrier. Contact your carrier for more information, including fees and charges.

Open  **Dialler**, go to  > **Settings** > **Wi-Fi calling**, enable **Wi-Fi calling**. Touch **Mode** and follow the onscreen instructions to set the preferred network.

Camera

Basic Camera Functions

Record Videos with Your Camera

-  The availability and functionality of certain features may vary according to the device model, due to software and hardware differences.

Go to  **Camera** > **Video**, then touch  to record a video.

- 
 - To set the video resolution, from the **Video** screen, go to  > **Resolution** and select a resolution.
 - Stabiliser** is supported during video recording at any resolution.

Take a picture while recording: Touch .

Zoom in or out: Touch and hold the viewfinder screen with two fingers, then spread your fingers to zoom in or pinch them to zoom out. When zooming in or out, a zoom slider will appear. Slide it up or down to zoom your camera in or out.

Keep the flash on while filming: When recording a video in dim light, touch , and select  to keep the flash on.

Shoot an AI video: Use the AI movie mode to add a film filter to the video. Touch , and select effects such as **AI colour** or **Background blur** to film an AI video.

-  During recording, touch  to take a photo with AI film effects.

Add a watermark to a video: On the **Video** screen, touch , and enable **Add watermark**.

Adjust Camera Settings

Open  **Camera** and touch  to access the **Settings** screen. From here you can:

- **Adjust the camera resolution:** Touch **Resolution** and select the desired resolution.
 -  This feature is not available in some modes.
- **Enable Location tag:** Enable **Location tag** to tag your location in photos.
- **Add watermarks:** Enable **Add watermark** to allow your device to automatically add a watermark to photos and videos.
- **Disable shutter sound:** Enable **Mute**.
- **Capture smiles:** Enable **Capture smiles**. The camera will take a photo automatically when it detects a smile in the viewfinder.

- **Save RAW format pictures:** RAW format records more detail and allows you to perform post-processing. In Pro mode, go to  > **Resolution** to enable **RAW format**. Now when you take a photo, it will be saved in RAW and standard format, and stored in a special folder in **Gallery**.
 RAW format pictures take up more storage space than standard format pictures.

Use an Assistive Grid to Compose Your Photos

Avoid skewed and off-centre photos. Use your camera's assistive grid feature to help you line up the perfect shot.

Open  **Camera**, touch  to enter the **Settings** screen, and enable **Assistive grid**. Grid lines will now appear when you take photos. The four intersecting points on the grid are the focus areas of the picture. Place the subject of your photo on one of the intersecting points to achieve a good composition.



Get Closer with Super Macro

Take extreme close-ups with **Super macro**, and capture vivid details of the world around you.

Open  **Camera** to display the viewfinder screen. Gradually move your camera close to the subject under **Photo** mode while holding your device steady. When your camera is close enough, it will automatically trigger **Super macro** mode.

- For your camera to automatically trigger **Super macro** mode, touch  to enable **Master AI**.
- Keep a distance of 2.5–8.0 cm (about 1.0–3.15 in.) from the subject.
- You can also manually enable **Super macro** by adjusting the camera zoom to a level below 1x or by going to **Camera > More > Super macro**.

Use Wide Angle to Take Photos

Fit a tall building into a photo even when shooting near it with wide angle.

Open  **Camera** and point your camera at a building. **Wide** mode will be automatically enabled to fit more of the image into your photo.

- Before using **Wide** mode, touch  to enable **Master AI**.
- Touch the zoom box on the right side of the viewfinder and select **Wide** at the bottom, or spread and pinch your fingers on the screen to adjust the zoom level. The smaller the zoom level, the more you can fit into the viewfinder.

Use Portrait Mode to Shoot Like a Pro

Go to  **Camera > Portrait**, adjust the following settings, then touch  to take a portrait.

Blur and lighting effects: Touch the  icon in the viewfinder and select a blur or lighting effect.

- A light source (such as a neon or street light) in a relatively well-lit background will contribute to better results. Taking photos at long distance will reduce the effect.

Beauty effect:

- Shoot using the rear camera: Touch  in the viewfinder and drag the slider to adjust beauty settings. A larger value will produce a more distinct beauty effect.
- Shoot using the front camera: Touch  in the viewfinder and drag the slider to adjust beauty settings. A larger value will produce a more distinct beauty effect. You can also touch **HDR** at the top of the screen to enable AI HDR to refine details in both the well-lit and poorly-lit areas of the photo.
- To disable the beauty effect, touch  in the viewfinder and drag the slider to the lowest level.

Use AR lens to Shoot Interesting Photos

Use **AR lens** to make your photos fun and stand out.

Go to  **Camera > More > AR lens**.

There are several effects to choose from to make your photos stand out:

- **3D Qmoji:** Touch **3D Qmoji**, and select an animated Qmoji. The Qmoji will then mimic and act out your facial expressions and actions accordingly. Touch  to record, or touch , then touch and hold  to create your own personalised Qmoji.

Use Wide Aperture Mode to Highlight Your Shooting Subjects

Wide aperture mode produces photographs with a shallow depth of field. This creates a blurred background that lends greater emphasis to the photo's subject.

Take a wide aperture photo: Go to  **Camera** > **Aperture**. When shooting, touch the screen to select a focal point, and then touch  to take the photo.

- For optimal results, ensure that the subject is positioned no more than 2 m away from the camera.
- Touch  and swipe left or right on the slider to adjust the aperture level. The smaller the aperture value, the more blurred the background will appear.

Panorama

Use Panorama Mode to Take Panoramic Selfies

Want to fit more friends or scenery in a selfie? Use Panorama to take selfies with a wider field of view.

- 1 Open  **Camera** and touch  to switch to the front-facing camera.
- 2 Go to **More** > **Panorama**.
- 3 Hold your device steady and touch  to take the first picture.
- 4 Follow the onscreen instructions and pan your device horizontally until the blue frame overlaps with the square screen frame. Your camera will automatically take another picture.
- 5 Follow the onscreen instructions again and pan your device in the opposite direction until the blue frame overlaps with the square screen frame. Your camera will automatically take the last picture.
- 6 Once complete, the camera will automatically combine the three pictures into a panoramic selfie.

Use Panorama Mode to Take Panoramic Photos

Panoramas provide a wider viewing angle than ordinary photos, letting you take sweeping landscape shots.

To capture a panorama shot, the camera takes multiple photos of objects within our visual field and stitches them together into a single photo.

- When taking a panorama, find a wide, open space that is some distance away from the subject and try to avoid backgrounds that are all in one colour.

- 1 Go to  **Camera > More > Panorama.**
- 2 Touch  at the bottom of the screen to configure the shooting direction.
- 3 Hold your Phone steady, and then touch  to start shooting. Slowly move the Phone in the direction indicated, holding the device steady and ensuring that the arrow stays level with the centre line.
- 4 Touch  when you are finished. The camera will automatically stitch the photos together to create a panorama.



Pro Mode

Use Pro Mode to Take Scenic Photos

Want to make your scenic photos more vibrant and interesting? Use Pro mode to take unique and personalised scenic photos.

Go to  **Camera > Pro** to enter Pro mode.

Select a metering mode based on the shooting subject: Touch , and select a metering mode.

Metering Mode	Application Scenario
Matrix	Broad landscapes and seas
Centre	The subject is in the centre of the picture, and stands out from the background.
Spot	The subject to be highlighted in the picture is relatively small, such as a flower or a tree.

Adjust brightness based on the shooting environment:

- **Adjust ISO:** Touch , and drag the ISO slider to adjust its value.

 To avoid excessive noise, the recommended ISO is below 400. The recommended ISO for the daytime is between 100 and 200 and around 400 for night scenes.

- **Adjust the shutter speed:** Touch  (shutter speed), and drag the shutter speed slider to your desired speed.

 The recommended shutter speed for static scenes (such as mountains) is between 1/80 and 1/125, and faster for moving subjects (such as waves). For best results, use a tripod when shooting a moving subject.

- **Adjust exposure compensation:** Touch , and drag the EV slider to your desired value.

Adjust AWB: Touch , and drag the AWB slider to your desired value.

-  • When shooting under sunlight, you can select . In a weak light environment, you can select .

- Touch  to adjust the colour temperature. If you want to give your photo a cosy, nostalgic tone, increase the K value. For a cold, calm or futuristic tone, lower the K value.

Adjust AF based on the shooting subject: Touch , and drag the AF slider to your desired value.

Focusing Mode	Application Scenario
AF-S mode	Static scenes (such as mountains)
AF-C mode	Moving scenes (such as flowing water and waves)
MF mode	Protruding objects (such as a close-up of a flower)

Hold your device steady when shooting: Touch  and enable **Horizontal level**. After this feature is enabled, two horizontal guiding lines will appear on the viewfinder. When the dotted line overlaps with the solid line, the camera is horizontally aligned.

Save RAW format pictures: Go to  > **Resolution**, and enable **RAW format**. After this feature is enabled, photos taken in Pro mode will be saved in both RAW and standard JPG formats.

-  • Some options in Pro mode may change after you modify settings.
- The aforementioned recommended settings are for reference only. You may adjust them based on the actual usage conditions to achieve your desired effect.

Use Pro Mode to Capture Portraits

Want to take more professional portraits? The Pro mode allows you to adjust your camera settings to shoot professional portraits.

Open  **Camera > Pro**.

Select a Metering mode:  or  mode is recommended for taking portraits. Place your shooting subjects (their faces for example) in the centre of the viewfinder.

Adjust brightness based on the shooting environment

- **Adjust ISO:** To avoid excessive noises, it is recommended that you adjust the ISO to a low level when shooting portraits. You may adjust the ISO based on the actual shooting environments.

Shooting Environment	Recommended ISO
Outdoors	Between 100 and 200
Indoors	Around 400
Night scenes	Between 400 and 800

- **Adjust shutter speed:** The shutter speed should be slow if the ambient light is low and fast when the ambient light is strong. The recommended shutter speed for static portraits is between 1/80 and 1/125. To shoot moving subjects, select a shutter speed at or above 1/125.
- **Adjust EV compensation:** You may increase the EV compensation if the light on the subjects or background is low, and decrease the EV compensation if there is too much light.

Adjust AWB: Select AWB depending on the lighting conditions. When shooting under sunlight, you can select  . In a low light environment, you can select  .

Adjust Focus: To better highlight a subject, it is recommended that you use manual focus (MF) when shooting portraits. In the viewfinder, touch to focus on the part (the subject's face for example) you want to highlight.

- In Pro mode, some settings may change after you change a setting. You may adjust them based on your actual needs.
- The recommended settings above are for reference only. You may adjust them based on the actual usage conditions to achieve your desired effect.

Take Black and White Photos

The world is an amazingly colourful place. But sometimes too many colours can be distracting. Monochrome mode filters out colour, helping to bring out light and shadows, and give photos more mood and atmosphere.

Open  **Camera** > **More** > **Monochrome**, and then touch  to take photos in black and white.



Light Painting Mode

Light Painting: Shoot Light Trails

Light painting mode automatically sets a slow shutter speed to take long-exposure shots of light trails. This mode produces stunning photos that have an ethereal quality.

Light painting mode offers four creative shooting modes for different subjects and light conditions:

- **Traffic trails:** Captures light trails created by cars at night.
- **Light graffiti:** Captures trails created by a moving light source in low-light conditions.
- **Silky water:** Captures silky-smooth photos of waterfalls and flowing water.
- **Star trails:** Captures stunning photos of star trails in the night sky.



Use Tail Light Trails to Capture the Lights of the City

Tail light trails lets you create artistic photos of car tail lights at night.

- Shoot from a distance and slightly above your subject for best results. Ensure that car headlights do not point directly at the camera, as this can overexpose the image.
- Place your device on a tripod or solid surface so that it does not move during the exposure.

Open  **Camera > More > Light painting > Traffic trails**. Hold your Phone steady, and then touch  to start shooting. A preview of the image is displayed in the viewfinder. Touch  when you are finished.



Use Light Graffiti to Create Light Patterns

Light graffiti lets you create patterns or write words by moving a light source in front of the camera.

- Find a dark location away from other light sources and ensure that the subject's silhouette is not visible. Choose a suitably bright light source of an appropriate colour, such as a small torch or glow stick.
- Place your device on a tripod or solid surface so that it does not move during the exposure.

Open  **Camera > More > Light painting > Light graffiti**. Hold your Phone steady, and then touch  to start shooting. A preview of the image is displayed in the viewfinder. Touch  when you are finished.




Capture Rivers and Waterfalls with Silky Water

The Silky water feature lets you capture silky smooth photos of waterfalls and rivers.

- This feature works best with a stream or waterfall with lots of water.
- Place your device on a tripod or solid surface so that it does not move during the exposure.

Go to  **Camera > More > Light painting > Silky water**. Hold your device steady, then touch  to start shooting. A preview of the image will be displayed in the viewfinder. Touch  when you are finished.

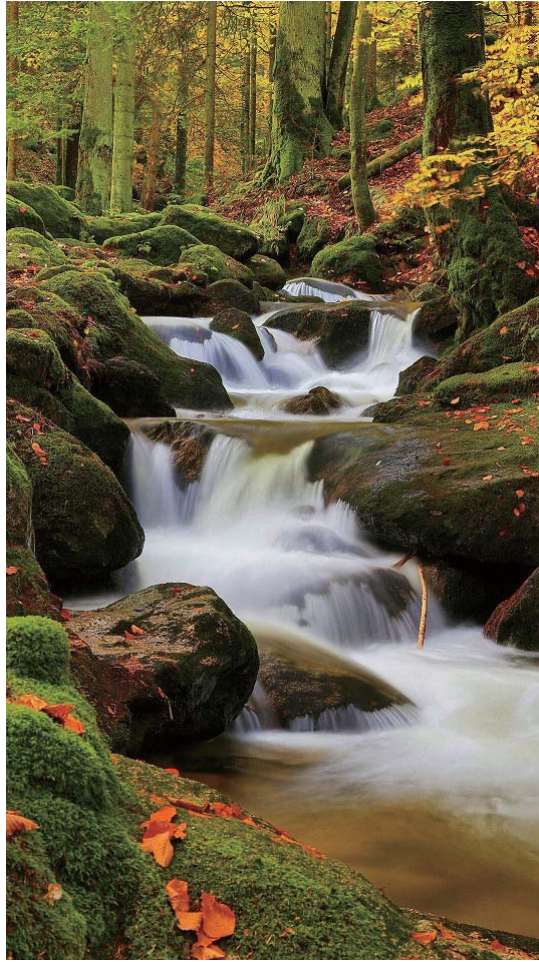

Use Star Track to Capture the Beauty of Stars

Star track allows you to capture the movement of stars in the night sky.

- For best results, choose a clear night in a location free of light pollution with an unobstructed view of the sky.
- Place your device on a tripod or solid surface so that it does not move during the exposure.

Go to  **Camera > More > Light painting > Star trails**. Hold your device steady, then touch  to start shooting. A preview of the image will be displayed in the viewfinder. Touch  when you are finished.



More Capture Modes

Use Time-Lapse to Create a Short Video

Use Time-lapse mode to capture images over a long period of time and condense them into a short video. Capture and watch nature in its entirety: blooming flowers, drifting clouds, or even star trails against the night sky.

- Recording a time-lapse video continuously for long period of time may consume battery power and use up storage space.
- Place your device on a tripod or flat surface to keep it steady while recording.
- Before you start, ensure that the scene is well lit and the camera is in focus. Position the camera carefully to fit relevant background objects as much as possible.

1 Go to  **Camera > More > Time-lapse**, and touch  to start recording a time-lapse video.

2 Touch  to finish recording.

3 You can then go to **Gallery** to play your time-lapse video.

- For best and optimal result, the recording and playback speeds are automatically adjusted by the system.

Custom Shooting Modes

Want to discover new ways of using your camera besides the preset functions? You can download or delete shooting modes based on your needs.

Download more shooting modes: Open  **Camera** > **More** > **Download**. Select the shooting modes to download, and touch **ADD**.

Update shooting modes: To update shooting modes, go to the **More** screen. The shooting modes with available updates will have red dots next to them. You can follow the onscreen prompts to update them.

Delete shooting modes: Go to **More** > , and touch  to delete unneeded shooting modes.

 To ensure that Camera works normally, preset shooting modes cannot be deleted.

Take Moving Pictures

Make your photos more dynamic and fun by taking moving pictures to prolong life's wonderful moments.

With moving pictures, you can record a scene approximately one second before and after pressing the shutter button. When browsing photos in Gallery, view the static picture taken or play a dynamic moving picture effect and sound.

Take moving pictures: Open  **Camera**, go to **More** > **Moving picture**, then touch  to take a moving picture.

View moving pictures: Moving pictures will be saved to **Gallery** in JPG format. Go to  **Gallery** > **Albums** > **Camera**, touch pictures with the  icon, and touch  on the top of the picture to view a dynamic effect. The moving picture automatically stops after a complete playback. You can also touch the screen to stop the playback.

Share moving pictures: Go to  **Gallery** > **Albums** > **Camera**, touch the moving picture you want to share, then touch  to select a sharing method.

 Moving pictures can be shared directly through Wi-Fi, Bluetooth, Huawei Share, and more. The receiving device must be a Huawei device that supports the capture of moving pictures in order to play the moving picture effect. When you share moving pictures to third-party apps or incompatible devices, moving pictures will be displayed as static images.

Gallery

Highlights

Highlights: Bring Your Memories to Life

Highlights creates albums of your best photos and videos based on time and location information and generates a short video clip so you can instantly relive the good times. You can edit Highlights albums and share the video clips with your friends.

- To start using Highlights, open **Camera**, touch , and enable **Location tag**.
- Check that your device is connected to the Internet.
- Highlights albums are created automatically when your device is charging, the screen is turned off, and the battery is at least 50% charged. This process may take some time. Highlights albums will not be created if there are fewer than 10 photos or videos in Gallery.

Use Highlights to do the following:

- **Automatically create scenario-based albums:** Highlights creates albums based on different scenarios during a certain period of time or at a certain location (such as a birthday party or graduation ceremony). You will be notified when a new Highlights album is ready.
- **Remind you of great moments:** Get reminded of Highlights albums created during the same time one year ago, or at the same location that you are visiting again.
- **Edit a Highlights album:** Rename an album, add or remove photos, and edit the background music or animations for the video clip. Save and share the clip with your friends.

Customise Highlights Albums

Highlights creates albums based on time and location information and generates a short video clip so you can instantly relive the good times. You can make a custom Highlights album by choosing your favourite photos and videos, then selecting a video template and the background music.

- To start using Highlights, open **Camera**, touch , and enable **Location tag**.
- Check that your device is connected to the Internet.
- Highlights albums are created automatically when your device is charging, the screen is turned off, and the battery is at least 50% charged. This process may take some time. Highlights albums will not be created if there are fewer than 10 photos or videos in Gallery.

Open  **Gallery**. From the **Highlights** tab, touch the Highlights album you want to view or edit.

Now you can do any of the following:

- **Play or edit Highlights:** Touch  to play the video. During playback, touch the video to select a preset template at the bottom of the screen. To customise even more, like changing the background

music or filters, touch  at the top of the screen. Touch  to save and  to export. Share what you've created with your friends.

 Exported Highlights clips are saved under **Gallery > Albums > Videos**.

- **Add or delete photos and videos from Highlights:** To add a photo or video, touch , select a photo or video, then touch . To delete, touch and hold a photo or video, touch , then touch **Move**.

 Only videos in MP4 format can be added to Highlights.

- **Share photos and videos from Highlights:** Touch and hold any photo or video in the album, touch , select a sharing method, and follow the steps to complete the process.
- **Rename the album:** Go to  > **Rename** to enter a new name.
- **Delete the album:** Go to  > **Delete**, then touch **Delete**.

Photo Management

Photo Recognition Helps You Sort Photos Intelligently

Is sorting your photos taking too long? Are you having a hard time finding the photo you're looking for? Photo recognition can automatically sort your photos into categories such as portraits, locations, scenery, and food in Gallery, so you can quickly find what you're looking for.

Sort photos intelligently: Gallery will automatically sort the photos you take into categories such as portraits, locations, scenery, and food, so you can quickly find what you're looking for.

Customise photo aggregation: After Gallery automatically aggregates different portrait albums for you, you can manually change the album names of portraits and set the relationship (for example, "Baby" and "Mom"). After the setting is complete, you can view different photo albums by name. You can also search for a photo by searching for the name and relationship in the Gallery search bar.

Aggregate group photos into albums: After Gallery intelligently identifies the categories, you can name the generated albums. If there are more than 10 group photos, Gallery will cluster them and generate a group photo album.

Edit Videos

Crop a video: Open  **Gallery**, select the video you want to edit, and touch  to enter the video editing screen. You can drag the slider in the crop area to select the segment you want to keep, and touch  to finish cropping the video.

Adjust the video resolution: As you drag the slider to select the video segment you want to keep, you can touch  to preview the cropped video. You can also touch the video resolution options on the editing screen to adjust the video resolution.

- The higher the resolution, the clearer the video, but also the greater the storage space required. Choose according to your needs.

Adjust Slow Motion Video Playback

Open  **Gallery**, select the recorded slow motion video, and touch  to play. Touch the screen and drag the slider in the edit area to select the segment you want to play in slow motion.

- Videos shot in  mode cannot be edited.

Edit Photos

Crop, rotate, and apply a variety of effects (such as graffiti, custom watermarks, and filters) to your photos in Gallery.

Open  **Gallery**, select the photo you want to edit, then touch . Edit the photo in the following ways:

- **Rotate:** Touch  and drag the angle wheel to the desired orientation. You can also touch **Rotate** to rotate your photo 90 degrees or touch **Mirror** to flip it.
- **Crop:** Touch  and drag the grid or its corners to make your selection. You can also select a fixed ratio and drag the corners of the grid to crop the photo.
- **Add filter effects:** Touch  to select a filter.
- **Colour splash:** Touch  to select the colours you want to highlight. Other parts of the photo will be black and white.
- **Blur:** Touch , select a blur mode, and drag the slider to adjust the blurriness.
- **Adjust photo effects:** Touch  to adjust the brightness, contrast, saturation, and other qualities of a photo.
- **Beautify a portrait:** **Beauty** is provided for portraits. Touch  to apply features such as **Smooth**, **Blemishes**, **Thin face**, and **Enhance eyes** to make a portrait more attractive.
- **Pixelate:** Touch  to select a mosaic style and size to censor parts of a photo.
- **Graffiti:** Touch  to select a brush and colour to add graffiti.
- **Add watermarks:** Touch  to select a watermark (such as **Time**, **Location**, **Weather**, or **Mood**).
- **Add a text element:** Touch  to select an element style and font format.

Browse and Share Photos or Videos

All photos and videos are stored in Gallery and can be viewed by time, location, or album.

View photos in full screen: Open  **Gallery** and touch a photo to view it in full screen mode. Touch the screen again to hide the menu. In full screen mode, you can:

- **View basic information about a photo or video:** Swipe up on a photo or video to view basic information.
- **Zoom in and out:** Spread or pinch together two fingers on the screen to zoom in and out. If a photo has a higher resolution than that of the screen, you can zoom in using two fingers. Once you take your fingers off the screen, the photo can only be enlarged up to twice its original size.
- **View shooting settings:** Touch  and scroll down to view details about the photo in the pop-up box, including ISO (sensitivity), EV (exposure compensation), and resolution.
- **Rename the photo:** Touch  > **Rename** to enter a new name.
- **Set the photo as a home screen wallpaper or contact picture:** Go to  > **Set as**, then select **Wallpaper** or **Contact photo**.

Share a photo or video: Open  **Gallery**. On the **Photos** tab, touch and hold any item to access the selection screen. Select the items you want to share, touch , then select a sharing method, and follow the steps to complete the process.

Switch between daily and monthly views: On the **Photos** tab, separate or pinch together two fingers on the screen to view photos by day or by month.

View by shooting location: Photos or videos taken while **Location tag** is enabled (in **Camera** settings) can be viewed in Map view. On the **Photos** tab, touch . Photos or videos containing location information will be marked on the map. Separate two fingers on the screen to zoom in on the map and view details about the shooting location. Touch a photo thumbnail to view all the photos and videos taken at that location.

View by album: You can view photos and videos by album. Some photos and videos are stored in default albums. For example, videos recorded with the camera are saved in the **Videos** album. Screenshots and screen recordings are saved in the **Screenshots** album.

Organise Albums

Add an album: From the **Albums** tab, touch **Add album**, name the album, then touch **OK**. Select the photos or videos you want to add.

Move photos and videos: Move photos and videos from various albums into the same one for easy management and browsing. Touch and hold a photo or video you want to move until  is displayed, then select all the photos and videos that you want to move. Touch  to select the desired album. Once the items are moved, they will no longer be in their original albums.

Add photos and videos to favourites: Add photos and videos to favourites for easier viewing. Open the photo or video that you want to add to the **My favourites** album, then touch .

Favourited photos and videos will remain in their original albums and have a  icon on their thumbnails.

Delete photos and videos: Touch and hold a photo or album until the  icon appears. Select the items you want to delete, then go to  > **Delete**. Deleted photos and videos will remain for a time in the **Recently deleted** album before being permanently deleted. Days remaining before deletion are marked on the photos. To permanently delete a photo or video manually, touch and hold its thumbnail, then go to  > **Delete**.

Recover deleted photos and videos: In the **Recently deleted** album, touch and hold a photo or video until the  icon appears. Select the items you want to recover and touch  to restore them to their original albums. If the original album has been deleted, a new one will be created.

Phone Manager

Use Optimise

Have you noticed that your device has slowed down recently? Do you worry that it might be vulnerable to malware and other security threats? Use Optimise to make your device run smoother and protect it from security threats.

Open  **Phone Manager**, and touch **OPTIMISE**. Your device will automatically optimise its overall performance, security, battery performance, and device management. You can also customise the optimisation options. The system will recommend that you use Optimise. This will help you increase running speed, check for security risks, optimise power consumption, and monitor and block unknown phone numbers and harassment calls.

Manage Mobile Data Usage

Manage mobile data usage to avoid incurring extra charges.

Open  **Phone Manager** and touch **Data usage** to view data usage statistics or enable **Smart data saver**.

- **Data usage this month:** Check the data usage ranking of apps.
- **Network access:** Manage Internet access permissions for each app.
- **Smart data saver:** Enable the data saver and select the apps that are allowed to use mobile data while running in the background.

Enable Smart Power Saving

Open  **Phone Manager**, touch  , then touch **Optimise battery usage**. The system will analyse your current battery usage and suggest ways that you can optimise it. You can also select other power saving modes:

- **Power saving mode:** Enable **Power saving mode**, and then the  icon will be displayed in the status bar. This mode reduces power consumption by limiting background app activity, visual effects, and sounds.
- **Ultra power saving mode:** Enable **Ultra power saving mode**. This mode strictly controls background app battery usage by allowing only Dialler, SMS, Contacts, and other user-specified apps to run in the background and disabling all system apps except Wi-Fi and mobile data.
- **Enable Smart resolution to save power:** Touch **Screen resolution** and then enable **Smart resolution**. Your device will automatically adjust the screen resolution based on the apps that are currently running to save power. Note that the display quality will be affected accordingly. You can also manually set the screen resolution to save power if necessary.

- **Darken interface colours to save power:** Enable **Darken interface colours** to darken the colours of some app interfaces to reduce power consumption.
- **Performance mode:** Enable **Performance mode**, and then the  icon will be displayed in the status bar. In this mode your device prioritises app performance based on the current scenario. This may drain the battery faster than other modes, especially when you are playing games or running other power-intensive apps.

The following options are also available:

- **View power consumption details:** Touch **Battery usage** or **Power consumption details**.
 - In the **Power consumption details** section, coloured bars beneath the **Charging** graph indicate when your device was charging. Gaps between the bars mean it was not charging. This feature does not consume power.
- **Display remaining battery percentage in the status bar:** Enable **Battery percentage** and select a display mode.
- **Check battery usage of power-intensive apps:** Go to **More battery settings > Power-intensive apps**. Disable apps that are not in use.

Use Auto-launch to Prevent Unwanted App Activities

Worried about third-party apps secretly running, occupying system resources, and consuming power in the background? Use Auto-launch to help you identify and prohibit unwanted app activities.

Open  **Phone Manager**, touch  > **App launch**, and you can:

- **Automatically manage apps:** Enable **Manage all automatically** or toggle on the switches for individual apps. The system will automatically analyse app usage and prohibit apps from automatic launch, secondary launch, and background running.
- **Manually manage apps:** If you have not enabled **Manage all automatically**, touch the switch of a desired app and enable or disable automatic launch, secondary launch, and background running accordingly.
- **View launch records:** Go to  > **Launch records** to view the detailed launch history for each app.

Enable Virus Scanner

Accessing unauthorised ads or links may infect your device with Trojans and malware that may secretly install themselves and steal your personal data. Running a virus scan can locate and remove potential threats on your device.

Virus scan is enabled by default. To view it, open  **Phone Manager** and touch **Virus scan**. The **Secure** icon indicates that your device is safe. You can also return to the **Optimiser** home screen and go to  to configure the following settings:

- **Smart tune-up:** If this option is selected, the system will obtain the latest app configuration data from the cloud to ensure better app performance.
 - **Auto-clean junk files:** If this option is selected, the system will automatically identify junk files and permanently delete them after 14 days.
 - **Auto-update cleanup database** and **Online virus scan:** Auto-update the cleanup database, or scan for viruses under the conditions of **Wi-Fi only** or **Wi-Fi and mobile data**. Select **Never** to disable these options.
-  The virus scan reminder is enabled by default. You will be notified if no anti-virus scan has been performed for more than 30 days.

Email

Add Email Accounts

Add your email account to your Phone for convenient email access at any time. If you have questions about specific settings while configuring your email, please consult your email account provider.

Add a personal email account: Open , select an email service provider or touch **Other**, enter your email address and password, then touch **Sign in** and follow the onscreen instructions to configure your account. The system will automatically connect to the server and check server settings.

Add an Exchange account: Exchange is developed by Microsoft and used by companies as their internal email system. If your company email uses Exchange servers, you can log in to your work email on your Phone. Go to  > **Exchange**, enter your email address, username, and password, then touch **Sign in** and follow the onscreen instructions to configure your account. The system will automatically connect to the server and check server settings.

After configuration, the system will open the **Inbox** screen by default.

Manage Email Accounts

You can manage multiple email accounts concurrently on your Huawei Phone.

Open  **Email**. You can:

- **Check emails:** On the **Inbox** screen, touch , and then select an email account to view the list of your emails. Swipe down to refresh the list of emails. Open an email to read, reply, forward, or delete it. Swipe left or right on the screen to view the previous or next email. To delete multiple emails, touch and hold an email to go to the email management screen, select the emails, and touch .
- **Sync emails:** Swipe down on the **Inbox** screen to refresh the emails list. Go to  > **Settings**, touch an account, and then enable **Sync Email**. To sync automatically, touch **Sync frequency** and select the syncing time to complete configuration.
- **Search emails:** On the emails list screen, touch the search bar, and enter a keyword, such as email subject and content.
- **Add multiple email accounts:** Go to  > **Settings** > **Add account**, select your email service provider, and enter your information.
- **Switch between email accounts:** On the accounts screen, touch , and then touch an account name to switch to.
- **Configure email accounts:** On the account screen, go to  > **Settings**, select an account to set **Account name**, **Default account**, and **Remove account**.

Manage VIP Email Contacts

Worried about missing an important contact's email among a sea of emails? You can add important contacts to the VIP list. Your device will automatically copy emails from VIP contacts to the VIP mailbox.

Open  **Email**, and go to  > **Settings** > **VIP contacts**. From the **VIP list** screen, go to **Add** > **Create** or **Add from contacts**.

Add or remove VIP contacts: On the **VIP list** screen, touch  or  to manage VIP contacts.

Create Smart Groups

Tired of having to manually enter multiple recipients when sending emails? Want to send emails to a fixed group of recipients? Use Smart groups to create different email groups.

Open  **Email** and open an email. From the sender or recipient field, touch **Add to group**. Select the sender or recipient that you want to add to the group, and touch **OK**. On the group selection screen, touch **Create group**. Enter a group name and then go to **Save**.

After creating a group, from the list of contact groups, select the group you want to edit. You can then:

- **Add members:** Touch  to add new members to the group.
- **Send messages:** Touch  to send a message or touch  to send an email.

Import Important Events to Calendar

Worried about missing an important event among a sea of emails? You can import important events to Calendar and view them at anytime and anyplace.

Open  **Email**, select the event from the email, and select  > **Add to calendar**.

Set Auto Response for Exchange Email

Unable to reply to emails on vacation? Enable auto responses to automatically reply to emails.

Open  **Email**, go to  > **Settings**, and select your Exchange account. Touch **Automatic replies**, enable **Automatic replies**, set the content and time of your auto reply, and then touch **Done**.

Calendar

Navigate the Calendar

Create an event: Open  **Calendar**, touch , and enter your event information, including the title, location, as well as start and end times. By default, you will receive the event reminder 10 minutes before the scheduled start time. You can also touch **Add reminder** to configure the reminder time, then touch .

Delete an event: On the **Calendar** screen, touch the event you wish to delete, then touch . To delete multiple events at a time, touch **Schedule**, touch and hold an event to access the selection screen, select the events that you wish to delete, then touch .

Search events: On the **Calendar** screen, touch  and enter keywords in the search box, such as the event title or location.

Configure calendar: On the **Calendar** screen, go to  > **Settings** to set the calendar view, reminder mode, and more.

Check the destination: Open **Calendar**. On the calendar or schedule screen, touch an event to view its destination information (if there is any).

Check the weather: Open **Calendar**. On the calendar or schedule screen, touch an event to view the weather forecast for the event date.

Check meeting participants: On the **Calendar** screen, touch a received meeting reminder for information about the participants.

Import To-Dos to Keep Your Work Organised

Many to-dos cannot be handled in time. What can I do if I forget to handle them? Import each to-do item to Calendar for easy reference and you will not miss any important events.

Import meeting reminders: Open  **Calendar**, go to  > **Manage accounts** > **Add account**, and follow the onscreen prompts to add your work emails (Exchange account) to the calendar to check meeting reminders.

Share an event: Touch an event on the calendar or under schedule, then touch  and follow the onscreen prompts to share the event using any of the multiple methods.

View Global Holidays

Travelling overseas for work or holiday? Download your destination country's holiday information ahead of time to better plan your work and schedule.

 This feature requires an Internet connection. Connect to a Wi-Fi network to avoid incurring unnecessary data charges.

Open  **Calendar**, go to  > **Settings** > **National/Regional holidays**, and enable the corresponding switch for your destination country. Your device will automatically download the holiday information.

Clock

Use the Clock

You can find various functions, including alarm, world clock, stopwatch, or timer in Clock.

View the time all over the world: Open  **Clock**, touch  on the **World clock** tab, and enter the name of a city or select one from the list of cities.

Display the time in two different regions: Open  **Settings**, and then go to **System > Date & time**. Enable **Dual clocks**, and set **Home city** to display the time in the region where you are currently located and the time in your home city on the lock screen.

 Two times will only be displayed if you are in a different region than the one you selected as your home city; otherwise you will only see one.

Notepad

Manage Your Notes to Keep Your Records in Order

Want to share important notes or add something to favourites? Manage your notes to keep your records in order.

Share a note: Want to send your meeting notes to your colleague? On the list page of **All notes** or **All to-dos**, open the note you want to share, then touch  to select a sharing method and follow the onscreen prompts.

Add a note to favourites: Want to add a note to favourites so you can refer to it later? On the list page of **All notes**, swipe left on a note and touch . Alternatively, open the note you want to add to favourites and touch .

Delete a note: Want to delete an outdated note? On the list page of **All notes** or **All to-dos**, swipe left on a note, then touch . Alternatively, touch and hold a note to view options, select the note(s) you want to delete, and touch .

Search notes: Want to quickly find a note? Touch the search bar on the list page of **All notes** and enter the keywords into the search bar. Alternatively, swipe down on the home screen to access the search bar, and enter the keywords into the search bar.

Generate a to-do list: Want to create a shopping list? On the page of **Notepad**, touch  > , enter an item, and then touch **Save**. Add multiple items to generate a to-do list.

 After completing an item, go to the editing page of **All to-dos**, and select  on the left of the completed item.

Add a handwritten note: Want to quickly record your drawing or handwriting? Go to **Notes** > , touch , write your notes, and touch  to save it. You can write and draw in Notepad.

Add tags to notes: Want to easily view the categories of your notes? On the editing page of **Notes**, touch , and use different coloured tags to categorise different content for a clearer view of your notes.

Utilities

Check Your Screen Time

Digital balance allows you to check the app usage, helps you manage your screen time and guides you towards healthier device usage habits.

To check your device usage, open  **Settings**, and go to **Digital balance > More**.

Check today's screen time: Touch **Today**, and you can check your **Screen time**, **App usage**, **Unlocks**.

Check last seven days' screen time: Touch **Last seven days**, and then check your **Screen time**, **App usage**, **Unlocks**.

Use Recorder to Make Audio Notes

Have you ever felt like you do not have enough time to take important notes during a meeting? Do you need to sort out a pile of notes from an interview or class? Recorder lets you record audio files that you can conveniently play back later.

Open  **Recorder**, and touch  to begin recording. While recording, you can add tags at important points. Touch  to finish recording and save the audio file.

After the recording is completed, you can:

- **Play recording from tag:** In the recording file list, touch a recording to go to the play screen. On the play screen, you can then touch a tag that you have added and play the recording from that point.
- **Manage recordings:** Touch and hold a recording for options such as sharing or deleting the recording.

 In the recording file list, touch and hold a recording file, and then touch  > **Details** to view its storage location.

Phone Clone

Data Backup to a Memory card

Worried about losing your data during a system update? Do you want to transfer data from an old device to your new Phone? If your Phone supports Memory card, you can back up your data to a Memory card at any time, giving you a convenient way to protect yourself from data loss.

To back up your data to a Memory card, open  **Settings**, and go to **System > Backup & restore > Data backup > External storage > Memory card**. Then touch **BACK UP**, from **Select data**, select the data you want to back up and touch **Back up**.

- You can enable **Auto-backup** on the backup page, and then connect your phone to the power supply. The system automatically backs up the data when the screen is off.
- You can touch  > **Backup encryption** > **Encrypt backups** to enable **Backup encryption** on the backup page, and then set a password when prompted. The password will be used when you want to restore files later. Always remember your backup password or set security questions to help remember the password as you will not be able to retrieve your backup files without it.

You can view your backup files in the **Huawei\Backup** folder by going to **Files** > **Categories** > **Memory card**.

Data Backup to a USB Storage Device

If you are running out of storage space on your Phone or you want to back up your important data to an external storage device, you can connect your Phone to a USB storage device using a USB OTG cable and back up your data to the storage device. USB storage devices compatible with your Phone include USB flash drives, card readers, and devices with an SD card inserted.

Open  **Settings**, go to **System** > **Backup & restore** > **Data backup** > **External storage** > **USB storage**, then touch **BACK UP**. On the **Select data** screen, select the data you want to back up and touch **Back up**.

- You can go to  > **Backup encryption** > **Encrypt backups** to enable **Backup encryption** on the backup page, and then set a password when prompted. The password will be used when you want to restore files later. Always remember your backup password or set security questions to help remember the password as you will not be able to retrieve your backup files without it.

Reset Your Phone

If the operating speed of your Phone starts to slow down due to long-term accumulation of caches and residual files, you can reset your Phone to erase these cached files completely and restore your device's factory settings.

Reset network settings: This will restore your Wi-Fi, mobile data network, and Bluetooth settings, including hotspot tethering and Bluetooth pairing information. It won't change other settings on your Phone, or delete any data or files.

Open  **Settings**, go to **System** > **Reset** > **Reset network settings**, touch **Reset network settings**, and follow the onscreen instructions to reset the settings.

Restore all settings: This will restore your device's initial network settings, fingerprint data, face data, and lock screen passwords. It won't reset settings for Find my Phone or HUAWEI ID, nor will it delete any data or files.

Open  **Settings**, go to **System** > **Reset** > **Reset all settings**, touch **Reset all settings**, and follow the onscreen instructions to reset the settings.

Restore factory settings: This will delete all data in your device's memory and storage, including your account settings, system settings, app data, installed apps, music, images, and documents, and restore your Phone to its original factory settings. Back up your data before restoring your device to its factory settings.

Open  **Settings**, go to **System > Reset > Reset phone**, touch **Reset phone**, enter the screen unlock password (if any), and follow the onscreen instructions to reset the settings.

Restore Your Backup Data

You need to select the corresponding method to the original backup method to restore the data on your Phone.

- 1 Open  **Settings**, then touch **System > Backup & restore > Data backup > external storage**.
- 2 Select the location from which your backup data will be restored:
 - a If you are using a memory card for backup, ensure that your NM card (nano memory card) has been inserted into slot 2 in your Phone. Then touch **Memory card** and select an appropriate backup record to access.
 -  • Not all devices support nano memory (NM) cards.
 - Insert the NM card (nano memory card) into card slot 2. You can buy a NM card (nano memory card) in Huawei stores.
 - b If you are using a USB storage device for backup, ensure that your Phone has been connected to a USB storage device. Then touch **USB storage** and select an appropriate backup record to access.
 - c If you are using a shared folder for backup, ensure that your Phone has detected the shared folder on your computer or home NAS devices through Wi-Fi scanning. Then touch **Shared folder** and select an appropriate backup record to access.
-  Your Phone stores the last three backup records (including automatic and manual backups). When there are more than three backup records, the earliest records will be deleted.
- 3 Select the data you want to restore and touch **Restore**. If you have enabled **Encrypt backups**, enter the password as prompted and restore your data.

Back up Data Using HiSuite

With **HiSuite**, you can easily back up important data on your device to a computer.

- 1 On the home page of **HiSuite**, touch **Back Up**.
- 2 On the **Back Up** page, select the data you want to back up and touch **Back Up**.
- 3 If you select **Encrypt with password**, follow the onscreen instructions to set a password and password hints.
- 4 Touch  to view the storage directory of your data backup, and touch  to change the storage directory. To change the storage directory on the computer, open **HiSuite**, and go to  **> Settings > Backup**.

5 HiSuite will then back up the data you selected. Keep the USB cable connected throughout the entire data backup process. Touch **Done** when all data has been backed up.

-  • Keep your password secure if you have set one when backing up your data. The backup data cannot be restored if you forget your password.
- It may take a while if you have a large number of apps, app data, images, videos, or audios on your device to back up.
- By default, your backup data will be saved to **C:\Users\User name\Documents\Hisuite\backup**.

Restore Data Using HiSuite

You can use the data recovery function of **HiSuite** to restore previously backed up data on your computer to your new device.

- 1** On the home page of **HiSuite**, touch **Restore**.
- 2** On the **Restore** page, select **Backup Record**, then select the data you want to restore to your device, and then touch **Restore**.
- 3** If you have set a password for the backup data on your device, you will need to enter the password and touch **OK**.
- 4 HiSuite** will then restore the data you selected. Keep the USB cable connected throughout the entire data recovery process. Touch **Done** when all data has been restored successfully.

Data Backup by Shared Folders to Your Computer or Home NAS Devices

Did you store important data, pictures, or large files on your Phone? You can back up your data to a computer or home NAS device by using a shared folder to prevent data loss and free up storage space on your Phone.

Open  **Settings**, go to **System > Backup & restore > Data backup > External storage > Shared folder**, and touch **Scan for shared folders**. After your Phone detects PCs or NAS devices on the same network through Wi-Fi scanning, touch to access a device and add its shared folder. Then touch **BACK UP**, select the data you want to back up in **Select data** and touch **Back up**.

-  • You can touch  **> Backup encryption > Encrypt backups** to enable **Backup encryption** on the backup page, and then set a password when prompted. The password will be used when you want to restore files later. Always remember your backup password or set security questions to help remember the password as you will not be able to retrieve your backup files without it.

HUAWEI ID and Multiple Users

Set and Use Multiple Users

Want to have more than one user account on your Phone to keep your work and personal life separate? You can add multiple users to your Phone and switch between them with a single touch.

Add Users or Guests

 A maximum of three users and one guest can be added.

Add a user: Touch  **Settings**, and go to **Users & accounts > Users**. Touch **Add user**, enter a name for the user and touch **ADD**. After you add a new user, you can switch to the new user and follow the onscreen instructions to configure the user's account settings.

Add a guest: Touch  **Settings**, and go to **Users & accounts > Users**. Touch **Add guest > ADD** to create a guest.

Set a user account name and profile picture: After adding a user, you can set a user account name and a profile picture for the user. To do this, switch to the relevant user, and touch . Follow the onscreen instructions to change the username and profile picture.

Allow a user to make calls, send messages, and share call records: The basic call functions can still be used after you switch to a different user mode. The added new user can make calls, send messages, and share call records with the phone owner. The guest user can make calls and share call records with the phone owner. To do this, log in with the owner account, and touch  **Settings**, and then go to **Users & accounts > Users**. Select the desired user, and touch **Allow calls and messages and sharing of communication history**.

Delete Users or Guests

To delete a user, select one of the following methods:

- Log in with the owner account, and touch  **Settings**, and then go to **Users & accounts > Users**. Select the desired user, and touch **Delete user > Delete**.
- Log in with the owner account, and swipe down from the status bar, and then go to  **> More settings**. Select the desired user, and touch **Delete user > Delete**.

To delete a guest, touch  **Settings**. Go to **Users & accounts > Users**, and then touch **Guest > Delete guest > DELETE**.

Switch Between the Owner Account, User, and Guest Modes

To switch between the owner account, user, and guest modes, select one of the following methods:

- Swipe down from the status bar, and touch . Then, touch the profile picture of the desired user.


- Touch  **Settings**, and go to **Users & accounts > Users**. Then, touch the username or profile picture of the desired user.
- ⚠ You will be prompted to enter the password to unlock the screen when switching back to the owner from another user.

Device Connection

Bluetooth

Connect Your Phone to Bluetooth Devices

Use Bluetooth to connect your Phone to Bluetooth headsets and in-car Bluetooth to navigate or listen to music while you drive. You can also connect your Phone to Bluetooth wearables to record and manage fitness data. Connecting Bluetooth devices to your Phone does not increase power consumption significantly.

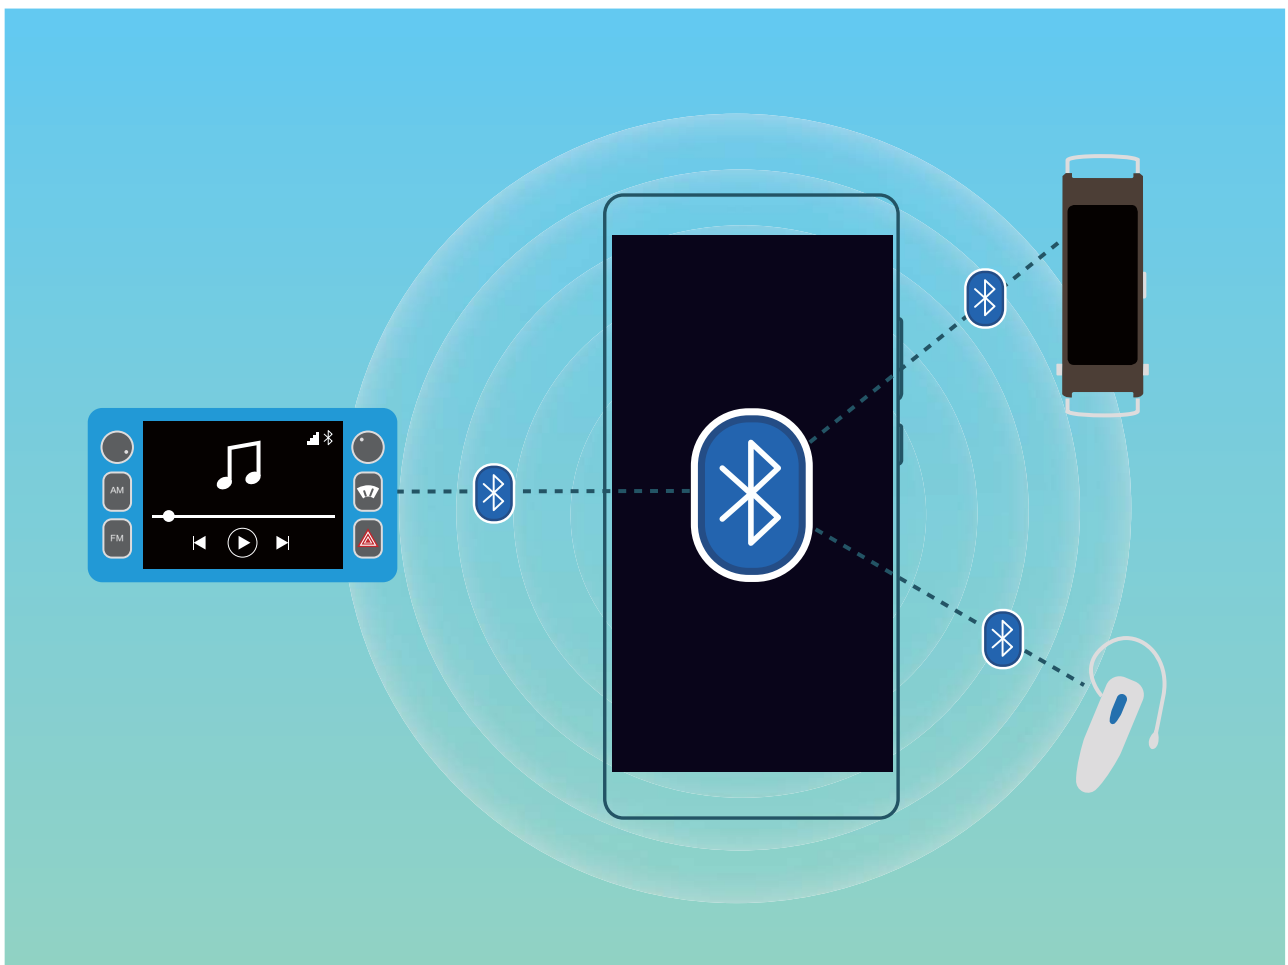

Bluetooth protocols used by Huawei devices and their functions:

HFP, HSP	Make calls
A2DP	Play music
AVRCP	Control music playback
OPP	Transfer files
PBAP	Sync contacts
MAP	Sync text messages

HID	Operate Bluetooth keyboards and mice
PAN	Tethering
BLE	Connect to Bluetooth Low Energy (BLE) devices

Enable or disable Bluetooth: From the home screen, swipe down from the status bar, open the shortcuts panel, and then touch  to enable or disable Bluetooth. Touch and hold  to open the Bluetooth settings screen.

Pair a Bluetooth device: Enable **Bluetooth** from the Bluetooth device's settings screen. Check that the Bluetooth device is set to visible. From **Available devices**, touch the device you want to pair and then follow the onscreen instructions to complete pairing.

Unpair a Bluetooth device: Enable **Bluetooth** from the Bluetooth device's settings screen. Touch  next to the name of the paired device and then touch **Unpair**.

Change Bluetooth device name: From the Bluetooth settings screen, enable **Bluetooth**. Touch **Device name**, enter a new name for the device, and then touch **Save**.

View Bluetooth help: From the Bluetooth settings screen, touch  to view information on how to establish Bluetooth connections with in-car systems, headsets, speakers, wearables, phones, tablets, and computers.

Use Bluetooth to Share Data

Connect your Phone to another device over Bluetooth to share data, import and export contacts, and set up Internet tethering.

Use Bluetooth to send files: Ensure that your Phone is within Bluetooth range of the other device (10 m or 32 ft). You can then establish a Bluetooth connection and share multimedia files, web pages, contacts, documents, and apps between the two devices. Open  **Files**, touch and hold the file that you want to send, and then go to **More > Share > Bluetooth**. Follow the onscreen instructions to enable Bluetooth. When the other device is detected (Bluetooth must be enabled and the device must be visible), touch the name of the device to establish a connection and start sending files.

Receive files over Bluetooth: From the home screen, swipe down from the status bar, open the shortcuts panel, and then touch  to enable Bluetooth. Touch **Accept** on the file transfer notification to begin receiving the files. Received files are saved to the **Bluetooth** folder in **Files** by default.

Import or export contacts over Bluetooth: Open  **Contacts** and go to  > **Settings > Import/Export** to perform the following:

- **Import contacts:** Touch **Import via Bluetooth** and follow the onscreen instructions to establish a Bluetooth connection with the other device. Contacts from the other device will then be imported to your Phone automatically.

- **Export contacts:** Touch **Share contacts**, select the contacts that you want to share, touch  and select **Bluetooth**. Follow the onscreen instructions to establish a Bluetooth connection with the other device. Those contacts selected will be exported from your Phone to the other device automatically.

NFC

Introduction to NFC

Near Field Communication (NFC) is a technology that enables short-distance wireless communication. Through NFC's contactless communication, two devices can transfer data in real time when they are within 10 cm (4 inches) of each other. In addition to data transfer, NFC also allows you to share apps, top up transport cards, check balances, and make payments.



NFC can be used in multiple scenarios with different requirements and methods.

Point-to-point mode: Transfers data between two NFC-enabled devices within a short distance. No pairing is required and a more secure connection is established.

-  Both devices need to support NFC.
 - During data transmission, devices must be within 10 cm (4 inches) of each other.
 - Screen must be on and unlocked when using NFC.

Scenarios

- Transfer files (such as images, apps, and contacts).
- Quickly establish a connection between devices (like Bluetooth pairing or hotspot sharing).

Read/Write mode: Supports reading and writing NFC tags.

-  Cards and products must support reading and writing NFC tags
 - **Read and write/P2P** must be enabled on the NFC settings screen if available. This feature may vary depending on your network provider.

Scenarios

- Use top-up apps to top up both physical and emulated transport cards, as well as to check balances.
- Check product information with NFC tags.

Card emulation mode: Allows your device to act as a smart card so it can access mobile ticketing for public transport, mobile payments, and door entry.

-  **SIM card emulation:** First contact your mobile network provider to obtain a SIM card that supports NFC.
- **eSE emulation:**
 - **Huawei Pay-enabled bank cards:** To make QuickPass payments on a QuickPass-enabled POS device, add a bank card to Huawei Pay that supports QuickPass.
 - **Huawei Pay-supported transport cards:** A virtual transport card must be added to Huawei Pay.
- **HCE emulation:** For example, UnionPay Cloud QuickPass. First download the app for your bank card and associate your card with the app. For details, consult your bank's customer service centre. Then enable NFC, set a specific bank app as your default payment app in NFC while keeping the screen on and unlocked. To make Cloud QuickPass payments, your card and the POS device must support QuickPass.

Scenarios

- **SIM card emulation:** Allows the SIM card provided by your network provider to act as a transport card.
- **eSE emulation:** Allows NFC's embedded security element to facilitate payments (such as in Huawei Pay).
- **HCE emulation:** Allows your device to act as a QuickPass-enabled bank card by associating your device with a physical bank card in a banking app.

-  Not all devices support NFC.

Turn Your Device into a Digital Key

If you often forget your car keys or worry about lost keys when lending your car, put your car keys in your device. Share and revoke digital car keys at any time to minimise risk. Your device can still act as your car key within 24 hours of a power-down due to low battery. Digital key data is stored in your device's security chip and cannot be copied.

Follow these steps to use Digital Key:

- 1** Activate your car key under the guidance of the customer service personnel for your automobile manufacturer or the 4S shop staff.
 - 2** Open  **Settings**, go to **Device connectivity > NFC**, enable **NFC**, and set **Default payment app** to your automobile manufacturer's app.
 - 3** To unlock your car, hold the NFC area of your device near your car's door handle. Screen can be on or off. To start your car, put your device into the Wireless Charging Shelf and press the start button on the car. After your car is started, you can remove your device from the Wireless Charging Shelf. To lock your car, close the door after you get out and hold the NFC area of your device near your car's door handle.
-  **Compatible car models:** Currently, only Audi A8/A7/A6/A5/A4/Q8 and e-tron are compatible with this feature. More models will be supported in the future.
 - You can share multiple secondary keys to others and revoke them at any time from your automobile manufacturer's app. The number, sharing method, and usage of the shared keys varies depending on your car model. For details, see the vehicle's user guide.
 - If your device is lost, you can revoke your digital key from your vehicle or manufacturer's app or website.
 - The NFC area is located around the rear camera on the device. Locations vary slightly between device models.



Use NFC to Share Data Quickly

NFC lets you share data across two devices quickly without the hassle of pairing. Simply place the NFC detection areas of both your devices in close proximity to each other, and then you can transfer files and other data quickly between the two NFC-enabled devices.



Use NFC to send data: Open  **Settings**, then touch **Device connectivity** and enable **NFC** and **Huawei Beam**. Select the files to be sent and touch **Share** > **Huawei Beam**. Keep your Phone unlocked and the screen on. Place the NFC detection areas of both devices close together. Once a connection is established, the transmitting device will play an audio prompt and the sharing screen will minimise. Touch the transmitting device's screen to begin sending files.

Receive files over NFC: Open  **Settings**, then touch **Device connectivity** and enable **NFC** and **Huawei Beam**. Keep your Phone unlocked and the screen on. Place the NFC detection areas of both devices close together. Once a connection is established, the transmitting device will play an audio prompt. After the prompt, please wait for the file transfer to complete. Received files are saved by default to the **Beam** folder of your **Files**.

-  • If there is an option to enable **Read and write/P2P** on the NFC screen, ensure that it is enabled. Features may vary depending on your network provider.
- Not all devices support NFC.

Use NFC to Quickly Establish Connections between Devices

Place the NFC detection areas of your two devices close together to quickly establish a Bluetooth or Wi-Fi connection between them. You can also use this method to establish a Wi-Fi Direct connection or to share a Wi-Fi hotspot without the trouble of searching for devices, pairing, and manually entering connection details.



For example, when pairing Bluetooth devices, enable NFC, Huawei Beam, and Bluetooth on both devices. Open the Bluetooth pairing screen on both devices and place the NFC detection areas of devices close together. When the transmitting device plays an audio prompt and the transmitting screen shrinks, follow the onscreen instructions and touch the screen on the transmitting device to establish a Bluetooth connection.

 If there is a **Read and write/P2P** switch on the NFC screen, ensure that it is also enabled.

Features may vary depending on your network provider.

Huawei Share

Use Huawei Share to Quickly Share Files between Huawei Devices

You can use Huawei Share to quickly transfer photos, videos and other files between Huawei devices. Huawei Share uses Bluetooth to detect other nearby Huawei devices and then uses Wi-Fi Direct to quickly transfer files without using mobile data.

- Huawei Share uses Wi-Fi and Bluetooth to transfer data. When Huawei Share is enabled, Wi-Fi and Bluetooth are both automatically enabled.

Use Huawei Share to send files: Select the files you want to share and then touch **Share**. To send files, select the receiving device from the list of nearby devices and confirm.

Use Huawei Share to receive files: Swipe down from the status bar to open the notification panel, and then touch  to enable Huawei Share. Touch **ACCEPT** when the file transfer notification is displayed. Received files are saved by default to your **Files's Huawei Share** folder.

- No confirmation is required if the two Huawei devices have been logged in using the same HUAWEI ID.

One-Touch Printing with Huawei Share

How do I quickly print travel photos, work files, or my children's homework from my device? Experience the ease of one-touch printing with Huawei Share.

- Huawei Share now supports one-touch printing for images and PDF files.
 - For a list of supported printers, touch **Learn more** in the Huawei Share section (access this section by touching the Share icon on the picture or PDF you want to share), swipe left on the screen, then touch **What printers are supported?** to see the list.

Huawei Share's one-touch printing feature is convenient and easy to use. To start using it, swipe down from the status bar to display all shortcuts, and enable **Huawei Share**, then follow the steps below to pair with different types of printers:

• Wi-Fi printer/Wi-Fi Direct printer:

- 1 Power on the printer, and make sure that it connects to the same network as your device, or that Wi-Fi Direct is enabled.
- 2 Preview the file you want to print on your device, and then touch **Share**. Once the printer has been discovered, touch its name, and adjust specifications on the preview screen. Then simply touch **PRINT** to print.

- **Bluetooth printer:** Power on the printer, preview the file you want to print on your device, and then touch **Share**. Once the printer has been discovered, touch its name, and adjust specifications on the preview screen. Then simply touch **PRINT** to print.

- When pairing the Bluetooth printer for the first time, start by making sure your device can find the printer, then press the power button on the printer for 1 second to ensure successful pairing.

Security and Privacy

Face Unlock

Enrol Your Facial Information and Enable Face Unlock

- ⚠️ • Face unlock can only be used when the owner account is logged in. It is not supported by user and guest accounts, or by PrivateSpace.
 - Face unlock is not available if the lock screen password has not been entered for at least three consecutive days, or if your device has been remotely locked or restarted.
 - When using Face unlock, keep your eyes open, and look straight at your device from a distance of 20–50 cm (about 8–20 inches). Your device may be unable to scan your face accurately if you are in an extremely dark environment or under direct lighting.
 - Currently, only one face can be enrolled. You can delete the current facial data and re-enrol your face.
- 1 Open  **Settings**. Go to **Security & privacy > Face recognition**, then enter your lock screen password.
 -  If you haven't set a lock screen password, follow the onscreen instructions to do so.
 - 2 If you select **Enable pick up to wake**, the screen will turn on and unlock when you pick up your device and hold it in front of your face. If you do not need this feature, do not select the option. Touch **Get started** and enrol your face.
 - 3 Face unlock modes:
 - **Direct unlock**: On the **Face recognition** screen, touch **Unlock device** and select **Direct unlock**. When you turn the screen on, your device will automatically recognise your face and directly unlock the screen.
 - **Slide to unlock**: On the **Face recognition** screen, touch **Unlock device** and select **Slide to unlock**. Once your device has recognised your face, slide on the lock screen to unlock it.
-  • If you have enabled **Show notifications**, your device will hide notification details on the lock screen and display them only when the owner's face has been recognised.
 - If you have also enabled **Access App lock**, you can access locked apps when your device recognises your face.

Delete Face Data

If you no longer use Face unlock or want re-input your face data, you can delete the current face data.

Open  **Settings**, go to **Security & privacy > Face recognition**, follow the onscreen instructions and enter the lock screen password, then touch **Delete facial data** and follow the onscreen instructions to delete your current face data.

-  Facial data will be erased if you reset all settings, restore your device to its factory settings, or set your password to none.
- Facial data will not be erased after online update.

Pick Up to Unlock

Open  **Settings**, and go to **Security & privacy > Face recognition**. When enrolling facial data, select **Enable pick up to wake**, and set the Face unlock method to **Direct unlock**. Once the setup is complete, you can simply raise your device to unlock the screen, without a password or fingerprint.

If you haven't selected **Enable pick up to wake** when enrolling facial data, you can open  **Settings**, go to **Security & privacy > Face recognition**, and set the Face unlock method to **Direct unlock**. Then, open  **Settings**, go to **Smart assistance > Motion control > Pick up**, and select **Wake device**.

Fingerprint

Fingerprint Recognition: Enjoy Faster Navigation and Enhanced Security

Fingerprint recognition not only allows you to unlock your Phone faster, it also provides added security to your personal information.

You can use your fingerprint to:

- **Unlock your screen with a single touch:** Want to avoid the hassle of using PIN codes and patterns to unlock your screen? Use your fingerprint to quickly and securely unlock your screen with a single touch.
- **Access your private files:** Afraid of forgetting your password for the Safe or app lock, or having it fall into the hands of someone you don't trust? Set fingerprint access for the Safe and app lock to keep your files and apps secure and accessible by only you.

Enable or Disable Location Services

After obtaining the location information permission, apps can obtain your location at any time. If your location information is obtained by a malicious app, you may be at risk of harm or fraud. You can enable or disable location services as needed and regularly monitor and manage the allowed permissions for your apps to protect your privacy and security.

Enable or disable location services: Open  **Settings**, go to **Security & privacy > Location access**, and enable or disable **Access my location**. When location services are disabled, aside for pre-installed software (such as Find my Phone), your Phone will stop all apps and services from collecting and using your location information. The system will ask you to enable location services when you attempt to use these apps.

- Features may vary depending on your network provider.
- Huawei only uses location data to provide you with necessary functions and services, not for the purpose of identifying and collecting your private information.

Set indoor positioning assistance: Open  **Settings**, go to **Security & privacy > Location access > Advanced settings**, and enable or disable Wi-Fi and Bluetooth scanning. Scanning Wi-Fi networks and Bluetooth devices will improve the accuracy of indoor positioning.

PrivateSpace

Enable PrivateSpace

With PrivateSpace, you can save your private information in a space that can only be accessed with your fingerprint or by a password you have set.

- You can add up to three user accounts (including the **PrivateSpace** and **Users** accounts) on your device. If you have already added three users under **Settings > Users & accounts > Users > Add user**, you cannot create your **PrivateSpace**.

Enable PrivateSpace: If you are using PrivateSpace for the first time, open  **Settings**, go to **Security & privacy > PrivateSpace > Enable**, and follow the onscreen instructions to create your PrivateSpace.

- You can create only one PrivateSpace.

Switch directly between MainSpace and PrivateSpace: From the lock screen, you can directly switch between spaces, using your fingerprint or the applicable passwords. After restarting your device, you must enter MainSpace with the password first, before switching to PrivateSpace from the lock screen.

Enter PrivateSpace: You can enter your PrivateSpace directly from the lock screen using your fingerprint or password. Alternatively, from MainSpace, open  **Settings**, and go to **Security & privacy > PrivateSpace > Log in** to enter your PrivateSpace.

Exit PrivateSpace: After entering your PrivateSpace, open  **Settings**, go to **Security & privacy > PrivateSpace > Exit**. When you exit your PrivateSpace, all system memory used by the PrivateSpace is freed for other tasks. You can still switch back to PrivateSpace as needed.

Delete PrivateSpace: Deleting your PrivateSpace will permanently delete all apps and data stored in PrivateSpace. This data cannot be restored. You can delete your PrivateSpace through the following ways:

- From MainSpace, open  **Settings**, go to **Security & privacy > PrivateSpace**, and then go to
  **> Delete PrivateSpace**.
- From PrivateSpace, open  **Settings**, and go to **Security & privacy > PrivateSpace > Delete**.

Hide the Entrance to Your PrivateSpace

Want to keep all traces of your PrivateSpace hidden from other people? You can hide the entrance to your PrivateSpace in the MainSpace, keeping your PrivateSpace hidden and secret.

After entering your PrivateSpace, open  **Settings**, go to **Security & privacy > PrivateSpace**, and enable **Hide PrivateSpace**. After you hide the entrance to your PrivateSpace, you can only enter the space by using your fingerprint or password on the lock screen.

Transfer Files Between PrivateSpace and MainSpace

Quickly transfer private photos, music, or videos between your PrivateSpace and your MainSpace.

- 1 In PrivateSpace, open  **Settings** and go to **Security & privacy > PrivateSpace**.
- 2 Touch **MainSpace to PrivateSpace** or **PrivateSpace to MainSpace**.
- 3 Follow the onscreen instructions to select files and transfer them to the target location.
 -  Files stored on your device or NM card can be transferred from your MainSpace to your PrivateSpace. Only files stored locally on your device can be transferred from your PrivateSpace to your MainSpace. Files stored in the cloud cannot be transferred between your PrivateSpace and MainSpace. Not all devices support nano memory (NM) cards.

By default, transferred image files are stored in **Gallery > Albums > Shared images** in the target space, and video files are stored in **Gallery > Albums > Shared videos** in the target space.

Transfer Your PrivateSpace Data to Your New Device

You can clone your PrivateSpace to quickly transfer your private files to another device.

-  • Before transferring your data, ensure that the new device has enough storage space remaining.
 - You can transfer the following data from one device to another: pictures, audio files and videos.
- 1 Enter PrivateSpace on your new device and open  **Settings**. Go to **Security & privacy > PrivateSpace > Space Clone > This is the new phone** to generate a QR code.
 - 2 Enter PrivateSpace on your old device and open  **Settings**. Go to **Security & privacy > PrivateSpace > Space Clone > This is the old phone**. Follow the onscreen instructions to scan the QR code displayed on your new device. Alternatively, connect your old device to your new device's Wi-Fi hotspot manually. After establishing a connection, select and transfer data from your old device to your new device.
-  You can cancel the file transfer anytime during the transfer process and continue your progress when you re-establish a connection.

Reset Your PrivateSpace Password

Too many passwords to remember? Can't enter my PrivateSpace without a password? Set a security question so that when you forget your PrivateSpace password, you can answer the security question to quickly reset your PrivateSpace password.

Enable the security question feature: After entering your PrivateSpace, open  **Settings**, and go to **Security & privacy > PrivateSpace**. Touch **Password protection** and follow the onscreen instructions to enter your MainSpace and PrivateSpace passwords to enter the password security question screen.

Set your security question: Touch the security question and either select one of the preset security questions or create your own. Enter the answer to the security question and touch **Finish** to enable the security question feature.

 After you enable the security question feature, you can also modify the security question and its answer.

Modify your PrivateSpace password: Enter the MainSpace, open  **Settings**, and go to **Security & privacy > PrivateSpace**. Touch  > **Reset password**. Follow the onscreen instructions to enter your MainSpace password and the answer to the security question, and then set your PrivateSpace password.

 You can reset the PrivateSpace password in the MainSpace only after you set the password security question in your PrivateSpace.

 **In case the entrance to PrivateSpace is hidden and you cannot enter the reset**

PrivateSpace screen: Enter the MainSpace and open  **Settings**. Go to **Security & privacy > More settings > Show all settings** and touch **OK** to display the entrance to PrivateSpace.

Enable App Lock

App lock allows you to set a password for your important apps. Once you restart your device or unlock the screen, you will be asked to enter your App lock password when opening these apps. App lock adds an extra layer of protection for your private information and prevents unauthorised access to important apps on your device.

Enable App lock: Open  **Settings**. Go to **Security & privacy > App lock**. When you first access App lock, select **Lock screen password** or **Custom PIN** as your **App lock** verification password. Enter your password as prompted and on the **App lock** screen, toggle on the switch for the apps you want to lock.

Set your App lock password: Touch  on the **App lock** screen, then touch **Password type**. Select **Lock screen password** or **Custom PIN**.

Use Password Vault

Password vault saves and fills in your passwords, allowing you to log in to apps on your device more conveniently and securely.

Enable or disable Password vault: Password vault is enabled by default. After you update your device, enable Password vault by performing the following operations:

- 1** Enter the lock screen password to access the Password vault settings. Open  **Settings**, and go to **Security & privacy > Password vault**.
 - 2** Enter your lock screen password to access the **Password vault** screen.
 - 3** Enable **Password vault**. When you log in to an app for the first time or after logging out, select **SAVE**, and your username and password will be saved. Next time you log in, use the method you picked, for example Face unlock, to automatically fill in your username and password to log in to the app.
 - 4** Enable or disable **Autofill settings** for individual apps. If the autofill feature is enabled for an app, you can use your face, fingerprint, or lock screen password to fill in the password when you log in. If this feature is disabled, your username and password must be entered manually.
-  Password vault does not work for certain apps due to version limitations.

Enhanced Data Protection: Defend Your Privacy

Worried that your photos, bank account information, or other private data might get leaked if your Phone is lost or stolen? Huawei Phones now feature security chips in addition to the combined protection provided by the trusted root key and lock screen password. Whether your data is stored in a memory card or internal storage, it will receive the highest level of protection.

Stronger encryption and safeguards: Huawei Phones use a hardware key that cannot be used to decrypt data when separated from the Phone. Based on the trusted root key, the encrypted components are incorporated into the memory control chip to enhance the data protection capability of the hardware. This works together with your lock screen password to protect your private data. When you use PrivateSpace, Multi-user, encrypted memory files, or other features to encrypt photos, personal information, or other personal data, the only way your data can possibly be decrypted is if the trusted root key, lock screen password, and security chip are simultaneously cracked. Not all devices support memory cards.



Wi-Fi and Network

Wi-Fi

Introduction to Wi-Fi+

Wi-Fi+ intelligently connects to Wi-Fi networks to save mobile data consumption. When your device detects a known or free Wi-Fi network, it will automatically turn on Wi-Fi and connect to the network. Your device will also automatically select the optimal network in the area for the best Internet connection.

Once you have enabled Wi-Fi+, your device will:

- **Automatically select and connect to the optimal network:** Automatically select and connect to Wi-Fi networks you've previously connected to, free networks, or your mobile data network, depending on the signal strength at your current location.

 You can view the connection status by checking the icons in the status bar:

- The  icon indicates that your device is connected to the Internet over Wi-Fi.
- The  icon in the bottom left of the signal bar indicates that your device is connected to the Internet over mobile data.
- **Automatically turn Wi-Fi on:** Depending on the Wi-Fi networks you have connected to previously, Wi-Fi will be automatically enabled in specific locations. This will prevent your device from constantly searching for new networks.
- **Assess the quality of available networks:** Evaluate currently available network hotspots and prevent your device from automatically connecting to networks with no Internet connection.

Connect to Wi-Fi

Connecting your device to a Wi-Fi network is an effective way to preserve mobile data.

-  To avoid potential security risks (such as unauthorised access to your personal data and financial information), please exercise caution when connecting to a public Wi-Fi network.



Connect to Wi-Fi: Open  **Settings**, go to **Wireless & networks > Wi-Fi**, and enable **Wi-Fi**. Select the Wi-Fi network that you would like to connect to. Follow the onscreen instructions to enter the password or to complete the authentication, depending on the network settings. Alternatively, you can scroll to the bottom of the Wi-Fi menu, touch **Add network**, and follow the onscreen instructions to add a network hotspot by entering its name and password.

Share a Wi-Fi Network with Wi-Fi Bridge

Wi-Fi bridge allows you to share your home Wi-Fi to friends and guests without having to reveal the password to them.

Enable Wi-Fi bridge: Open  **Settings**, go to **Wireless & networks > Personal hotspot > More**, and enable **Wi-Fi bridge**.


Set Wi-Fi bridge: Touch **Set Wi-Fi bridge** to view or set a temporary name and password for the shared Wi-Fi network.

Once you provide your friends or guests with the temporary name and password, they will be able to connect to the network until the feature is disabled.

 Up to 4 devices can be connected to your home Wi-Fi through Wi-Fi bridge at any given time.

Transfer Data Using Wi-Fi Direct

Wi-Fi Direct allows you to rapidly transfer data between Huawei devices. Wi-Fi Direct is faster than Bluetooth and does not require devices to be paired. It is better suited to transferring large files over short distances.

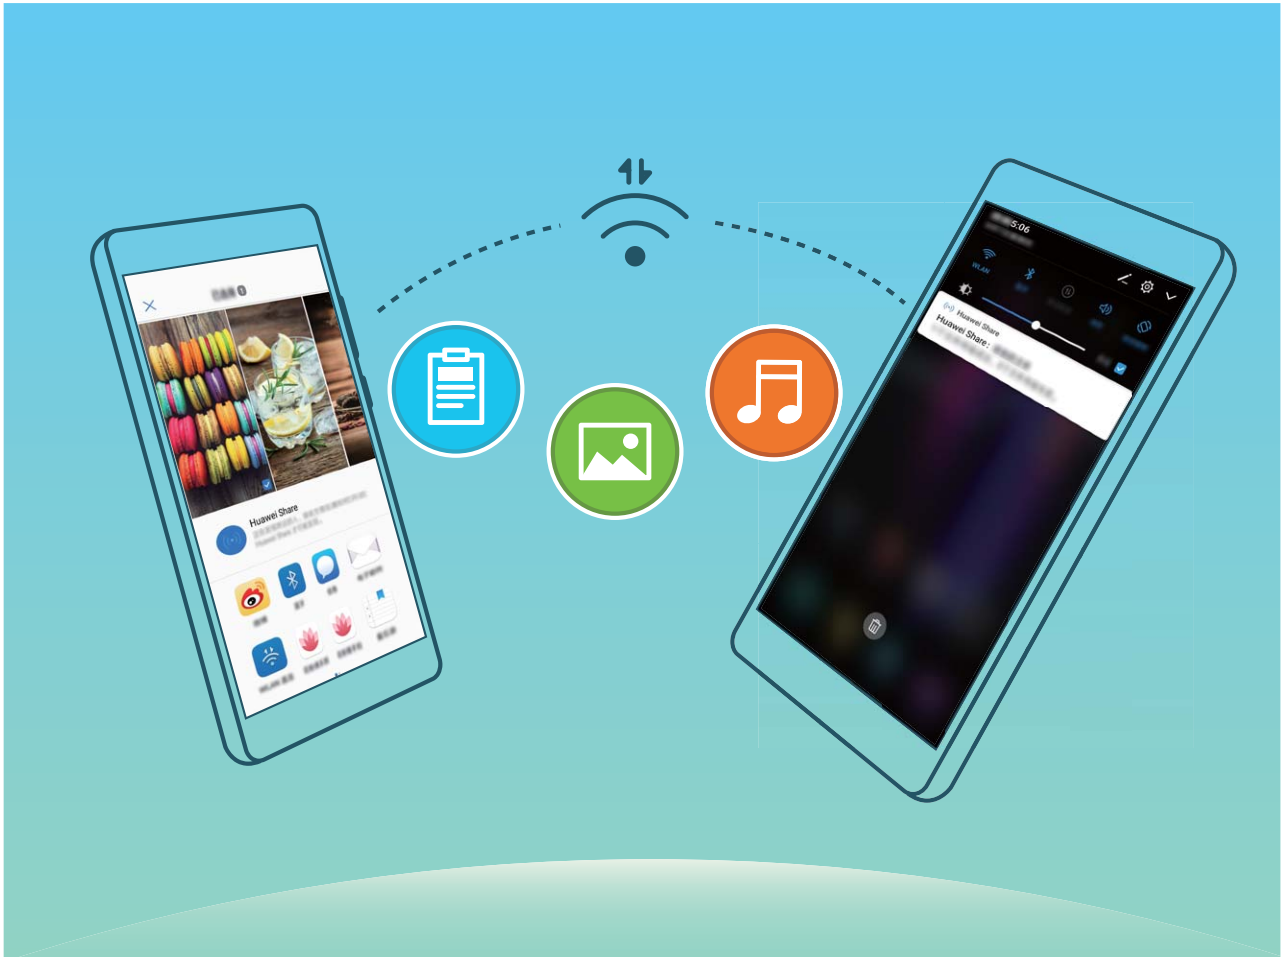

Send files with Wi-Fi Direct: Open  **Files**, touch and hold a file you want to send, and go to **More > Share > Wi-Fi Direct**. When another device is detected, touch its name to establish the connection and begin file transfer.

Receive files with Wi-Fi Direct: Enable **Wi-Fi**. In the Wi-Fi settings screen, touch  > **Wi-Fi Direct** to enable detection. When you receive an incoming file prompt, touch **Accept** to begin the transfer. The received file will be saved under **Files** in the **Wi-Fi Direct** folder by default.

Turn Wi-Fi+ On or Off

Open  **Settings**, go to **Wireless & networks > Wi-Fi >  > Wi-Fi+**, and choose to enable or disable **Wi-Fi+**.

-  • Your Phone will automatically connect to the optimal network available after Wi-Fi+ is enabled.
- Wi-Fi+ may automatically switch to your mobile data network, depending on strength of Wi-Fi+ signals in your area. Note that using mobile data to download or view videos and other large files may incur additional data usage fees. To avoid excessive data charges, purchase an appropriate data plan.
- After Wi-Fi+ is enabled, even if Wi-Fi is disabled manually, the device may automatically switch to a Wi-Fi network when it detects a viable Wi-Fi network you have previously connected to.

Enable 5G

-  • When two SIM cards are inserted, only the default SIM card will support 5G service. The other card will only support 4G/3G/2G service.
 - 5G service may be unavailable in certain areas due to network interference.
- 1** Contact your network provider to enable 5G service.
 - 2** Open  **Settings**, go to **Wireless & networks** > **Mobile network**, and enable **5G** for the default SIM.

Connecting to the Internet

Connect to Wi-Fi networks effortlessly with your device.

Connecting to a Wi-Fi network

- 1** Swipe down from the status bar to open the notification panel.
- 2** Touch and hold  to open the Wi-Fi settings screen.
- 3** Switch on **Wi-Fi**. Your device will list all available Wi-Fi networks at your location.
- 4** Select the Wi-Fi network you want to connect to. If you select an encrypted network, you will also need to enter the Wi-Fi password.

Connecting using mobile data

-  Before using mobile data, ensure that you have a data plan with your network provider to avoid incurring excessive data charges.
- 1** Swipe down from the status bar to open the notification panel.
 - 2** Touch  to enable mobile data.
-  To save battery power and reduce data usage, disable your mobile data connection when you don't need it.

Share Your Mobile Network with Other Devices

You can share your mobile data with your friends.

Use personal hotspot to share mobile data: Open  **Settings** and go to **Wireless & networks** > **Personal hotspot**. Set **Device name** and **Password**, then enable the hotspot to use it.

 **Set data limit for shared mobile data:** Go to **Settings** > **Wireless & networks** > **Personal hotspot** > **More**, and touch **Data limit** to set the data limit for a single session. When this limit is reached, your device will automatically disable the hotspot.

Use Bluetooth to share mobile data: Connect your device to another device using Bluetooth, then enable Bluetooth tethering to share your mobile data. Open  **Settings**, go to **Wireless & networks** > **Personal hotspot** > **More**, and enable **Bluetooth tethering**. On the **Bluetooth** settings screen of the paired device, touch  next to the paired device, then enable **Internet access** to establish an Internet connection and share your mobile data.

Use USB to share mobile data: Use a USB cable to connect your device to a computer. Open  **Settings**, go to **Wireless & networks** > **Personal hotspot** > **More**, and enable **USB tethering** to start sharing your mobile data.

 Depending on your computer's operating system, you may need to install device drivers or establish the relevant network connection on your computer before using this feature. Refer to your computer's operating system guide for more information.

Apps and Notifications

App Twin: Log in to Two Social Media Accounts at Once

Have you ever wished you could log in to two WeChat and Facebook accounts on your Phone without the hassle of constantly switching between them? App twin lets you log in to two WeChat and Facebook accounts at the same time, allowing you to keep your work and private life separate.

-  The App twin feature only works with WeChat, QQ, LINE, Facebook, Snapchat, WhatsApp, and Messenger. Download the latest versions of these apps before using this feature.

Open  **Settings**. Go to **Apps > App twin** and enable App twin for WeChat, QQ, LINE, Facebook, Snapchat, WhatsApp, or Messenger as required.

When App twin is enabled, two WeChat, QQ, LINE, Facebook, Snapchat, WhatsApp, or Messenger app icons are displayed on the home screen. This means that you can log in to two accounts at the same time. Touch and hold the twinned app icon on the home screen to quickly disable App twin.

Customise App Permissions to Use Your Device Your Way

Worried about third-party apps obtaining too many important permissions and disclosing your personal information? You can monitor the permissions of each app and deny unwanted permissions.

-  Disabling a permission may cause an app function to become unavailable. For example, if the location permission for a map app is disabled, the app will be unable to provide you with location and navigation services.

Set app permissions: Want to deny unwanted permissions? Open  **Settings**, and go to **Apps > Apps**, select the app and touch **Permissions** on the **App info** screen and then enable or disable the unwanted permissions.

Check and modify permissions: Want to check which apps are allowed important permissions?

Open  **Settings** and touch **Apps > Permissions**, select the permission you want to view and touch the switch next to an app to allow or deny the permission for that app.

Sound and Display

Set Up Do Not Disturb Mode

Do not disturb mode blocks calls from strangers and only notifies you when you receive calls and messages from chosen contacts.

Open  **Settings**, then go to **Sounds > Do not disturb** to do the following:

- **Do not disturb:** Touch **Do not disturb** to immediately enable or disable this function.
- **Schedule rule:** Prevent interruptions at set times, such as weekends or evenings. Touch **Scheduled** to set the time period and repeat cycle.
- **Allow calls from important contacts:** Select **Calls**, then select **Contacts only** or **Favourites only**.
- **Allow messages from important contacts:** Select **Messages**, then select **Contacts only** or **Favourites only**.
- **Allow repeated calls to ring:** **Repeated calls** is enabled by default. Your device will ring when the same phone number calls more than once within 3 minutes.

Configure the Sound Settings

 The availability and functionality of certain features may vary according to the device model, due to software and hardware differences.

Stereo sound in landscape mode: With the **Stereo+** feature enabled by default, your device will automatically switch to stereo sound when in landscape mode so you can enjoy stereo sound when watching films or gaming. To disable this feature, open  **Settings**, go to **Sounds > More sound settings**, and disable **Stereo+**.

Adjust system volume: Press a volume button and slide to adjust the media volume. Alternatively, touch  to display the sound settings screen and adjust the ringtone, media, and alarm volume from there.

-  • You can also adjust the volume in the system settings. Open  **Settings**, then touch **Sounds** and slide to adjust the volume.
- On the sound settings screen, touch **Default volume button control** and select **Ringtone volume**. You can now use the Volume buttons to adjust the ringtone volume.

Switch between sound, vibration, and silent mode: Swipe down the notification panel. Touch  to switch between **Sound** mode, **Silent** mode, and **Vibration** mode.

Enable keypad and notification sounds: Open  **Settings**, and go to **Sounds > More sound settings** to enable or disable keypad touch sounds, notification sounds, and touch vibrations.

Set your device to Silent mode: From the **Sounds** screen, enable **Silent mode**, then enable **Silent mode** and **Vibrate in silent mode**. Now when you receive an incoming call, your screen will light up and your device will vibrate.

Customise your ringtone and notification sounds: From the **Sounds** screen, choose a ringtone or notification sound according to your preferences.

Enable Eye Comfort Mode to Prevent Eye Strain

Do your eyes get tired and sore after looking at your Phone for a long time? Eye comfort mode can effectively reduce blue-light and adjust the screen to warmer colours, relieving eye fatigue and protecting your eyesight.

Enable Eye comfort mode: Open  **Settings**, go to **Display > Eye Comfort**, and enable **Eye Comfort**. The Eye comfort mode icon  will be displayed in the status bar. Once Eye comfort mode is enabled, blue light will be filtered out and the screen will take on a yellow tint.

Quickly enable or disable Eye comfort mode: Swipe down from the status bar to open the notification panel. From the notification panel, expand the shortcuts panel, then enable or disable .

Enable Eye comfort mode at set times: You can configure your Phone to enable Eye comfort mode for a set period of time each day. When Eye comfort mode is disabled, open  **Settings**, go to **Display > Eye comfort**, and enable **Scheduled**, then set your desired **Start** and **End**.

Adjust Eye comfort mode colour temperature: Once Eye comfort mode is enabled, blue light will be filtered out and the screen will take on a mild yellow tint. You can adjust the colour temperature as needed. After you have enabled **Eye comfort**, you can adjust the colour temperature slider for a cooler or warmer screen colour.

-  • After using your mobile phone for half an hour, rest your eyes for 10 minutes.
- While you are resting, look into the distance to adjust the focusing muscles of your eyes and avoid eye fatigue.
- Cultivating good eye care habits will protect your vision and prevent near-sightedness.

More Display Settings

Use Shortcuts to Access Frequently Used Features

-  If you touch and hold an app icon and no shortcut is created, the app does not support home screen shortcuts.

Each app supports up to four frequently used features. These are preset by the app and cannot be changed.

Quickly access frequently used app features: Touch and hold an app icon, and then touch a frequently used feature to access it. For example, to take a selfie, touch and hold the Camera icon, and then touch **Selfie** in the pop-up menu to create a selfie shortcut.

Add shortcuts to your home screen: Touch and hold an app icon on your home screen to bring up the menu. Touch and hold the desired feature and drag it to your home screen to create a shortcut. For example, you can add a shortcut for the camera's selfie feature to the home screen.

Storage

Enable Memory Cleanup

Your device may slow down over time as your storage space gets smaller. Use Memory cleanup to free up storage space, improve system performance, and keep your device running smoothly.

Open  **Phone Manager**, then touch **Cleanup** to clean up memory and clear the cache to optimise performance. If your storage space is still low, perform a deep clean to free up additional storage space.

Smart Assistance

Access Device Functions from Anywhere with Navigation Dock

In order to close an app or return to the home screen, you must use the navigation bar at the bottom of your device. You can enable the Navigation dock feature on your device to avoid using navigation buttons and to comfortably operate your device with one hand.

Open  **Settings**. Go to **System > System navigation > Navigation dock** and enable **Navigation dock**. The Navigation dock will appear on the screen. You can then drag it to your preferred location. The Navigation dock can perform the following actions:

- **Back**: Touch the Navigation dock once to go back one step, or touch it twice to go back two steps.
- **Home**: Touch and hold the Navigation dock and then release it to go to the home screen.
- **View background apps**: Touch and hold the Navigation dock and then swipe left or right to view any apps that are running in the background.

Use a Flip Cover to Protect Your Device

A flip cover not only protects your device from external damage, but also allows you to view the date, time, and notifications, answer phone calls, listen to music, and turn off alarms through its display window.

-  For best results, it is recommended that you purchase and use an official Huawei flip cover from Vmall.
- Different models of device support different types of protective cases. Please check the case types supported before making a purchase.

Enable Smart cover mode: Open  **Settings**, go to **Smart assistance > Smart cover**, and enable **Smart cover**. Based on the type of flip cover you are using, enable or disable **Use display window**.

Open or close a flip cover: Your device detects the magnetic chip in the flip cover using Hall sensor. This means that when you close the cover, your device automatically locks the screen as well. As you open the cover, the magnetic chip can no longer be detected and your device's screen automatically lights up.

- **Close a flip cover without window**: If you close the cover when your device is on standby, your device will automatically lock the screen.
- **Close a flip cover with window**: After closing the cover, you can still view the date, time, weather, charging information, notifications, step count, music or alarm screen, and other information through the display window. If your current location is different from your home city, the time and weather for both places will be displayed.

Answer calls: If you are using a flip cover without a window, you can close the cover and continue with the current call. To hang up, open the cover to end the call. If your flip cover has a display window, from the incoming call screen, drag  to  to answer the call. To hang up the call, drag  to .

Play music: Closing the flip cover will not stop music playback. If your flip cover has a display window, you can touch  or  to switch between songs. Touch  or  to pause or resume playback.

Silence alarms: To silence a ringing alarm, open and close the flip cover or press the Power button. Your device will continue to give you alarm reminders according to the snooze settings. If your flip cover has a display window, you can disable the alarm by swiping the screen as prompted or touch the screen to silence it.

Enable or Disable Mistouch Prevention

Enable Mistouch prevention to prevent unintended operations resulted from accidental touches on the screen.

Open  **Settings**, touch **Smart assistance**, then enable or disable **Mistouch prevention** as required.

System

Change the Input Method

You can change the input method on your device as desired.

Switch the input method: Open  **Settings**, go to **System > Language & input > Default keyboard**, and select an input method.

General Settings

Change Your System Language

You can change the system language on your device as needed.

Open  **Settings**, go to **System > Language & input > Language and region**, then select the language you want to use. If the language you want to use is not listed, touch **Add language** to search for additional languages. You can also touch **Region** to select the country/region. The system interface is displayed according to the local habits of the selected region.

Set the System Date and Time

If you travel abroad or change your SIM card, your device will automatically display the date and time provided by the local mobile network. You can also adjust the date and time manually, change the time format, or set dual clocks on your lock screen.

Open  **Settings**, and go to **System > Date & time**. From here you can:

- **Change the date and time:** Enable **Set automatically** to sync your device's date and time with that of your mobile network. Disable **Set automatically** to set your date and time manually.
- **Change the time zone:** Enable **Set automatically** to sync your device's time zone with that of your mobile network. Disable **Set automatically** to set your time zone manually.
- **Change the time format:** Enable **24-hour time** to set your time format to 24 hours. Disable **24-hour time** to set your time format to 12 hours.
- **Set dual clocks on your lock screen:** When you are roaming outside of your home country, your device will automatically display the local date and time provided by the local mobile network. Enable **Dual clocks** and set **Home city** to display dual clocks on your lock screen. One clock will display the local time and the other clock will display the time in your home country.

Print Documents and Photos from Your Phone

Connect your Phone to a printer over Wi-Fi to print out documents and photos with ease.

- Mopria allows you to print directly from your Phone to a Mopria-certified printer. The printer connects to your Phone over Wi-Fi.
- If your printer is not Mopria-certified, contact the printer manufacturer to obtain a plug-in for your model.

1 Connect your Phone and printer to the same Wi-Fi network.

- **Connect to your printer's hotspot:** If your printer has a wireless hotspot, follow the instructions in the printer manual to enable the hotspot and set a password. On your Phone, open  **Settings** and go to **Wireless & networks > Wi-Fi**. Enable **Wi-Fi**, select the printer hotspot, and then follow the onscreen instructions to establish the connection.
- **Connect with Wi-Fi Direct:** If your printer supports Wi-Fi Direct, follow the instructions in the printer manual to enable this feature. On your Phone, open  **Settings** and go to **Wireless & networks > Wi-Fi**. Enable **Wi-Fi**, touch  **> Wi-Fi Direct**, and then select your printer from the list of detected devices.
- **Connect to your router:** On your printer, enable Wi-Fi and connect to your home router. On your Phone, open  **Settings** and go to **Wireless & networks > Wi-Fi**. Enable **Wi-Fi**, select your router, and then follow the onscreen instructions to complete the settings.

2 Open **Settings**. Go to **Device connectivity > Printing > Default Print Service** and check that **Default Print Service** is enabled. Select a printer from the search results, follow the onscreen instructions to manually add a printer.


3 You can now print directly from your Phone:

- **Print an image:** Go to **Gallery**. Open the image that you want to print, go to **More > Print or export to PDF**, and then follow the onscreen instructions to send the image to the printer.
- **Print a webpage:** In your browser, open the webpage that you want to print, and then select the print option from the menu.
- **Print a document:** Open the document that you want to print in a productivity app and select the print option from the menu.
- **Print a note:** Open  **Notepad**. Open the note that you want to print, go to **Print**, and then follow the onscreen instructions to send the note to the printer.

Enable Gloves Mode

Gloves mode makes it easier to use your phone when you are wearing gloves on cold winter days.

Go to  **Settings > Smart assistance** and enable **Gloves mode**.

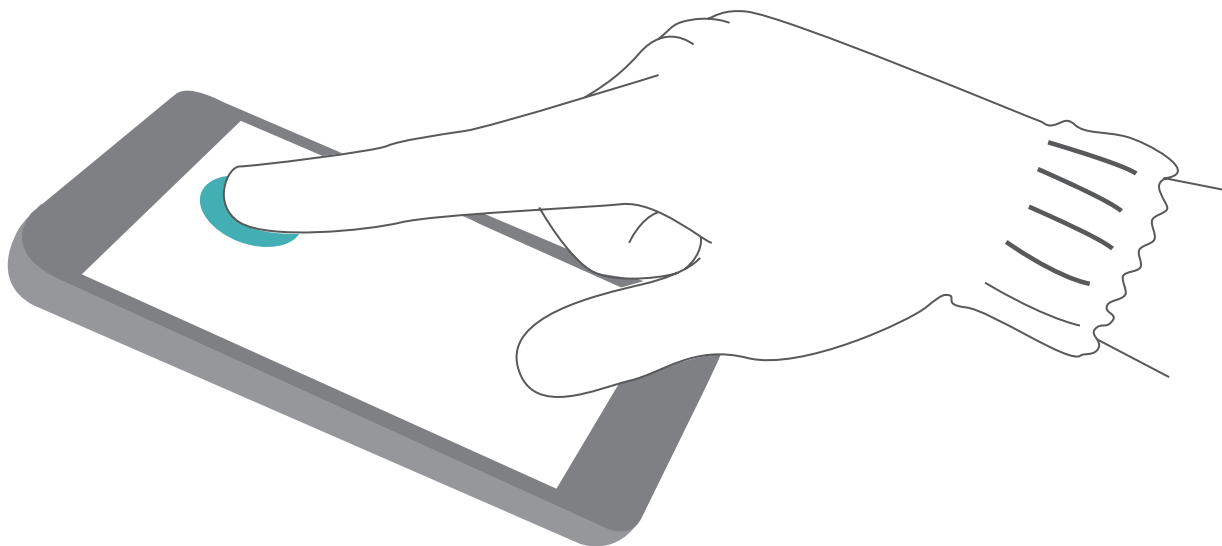

Set Scheduled Power On/Off

Use the Schedule power on/off feature to power your device on and off at set times in order to save power and prevent interruptions while resting.

Open  **Settings**, go to **Smart assistance** > **Scheduled power on/off**, enable **Scheduled power on/off**, then set the power on and power off times as well as the repeat cycle. Your device will power on and off automatically at the selected times.

To disable **Scheduled power on/off**, toggle the switch off.

View Memory and Storage Status

Unsure of how much memory and storage you have left after using your Phone for a long time? You can view your Phone's memory and storage information to help you monitor your memory and storage use and decide whether to perform a cleanup.

 Not all devices support microSD cards.

Open  **Settings**, and touch **Storage** to view the memory usage, and free up more space in a timely manner based on the available storage space.

Clean up space (recommended): If you select **CLEAN UP**, you can view the usage details of apps. Based on the scan result, you can also manually clean up the system as recommended or specify items to clean up.

Legal Notice

Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2019. All rights reserved.

This document, whether in part or whole, shall not be reproduced or transmitted in any way, shape, or form without the prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this document may include software that is the copyright of Huawei or its licensors. Such software shall not be reproduced, distributed, modified, decompiled, disassembled, decrypted, extracted, reverse engineered, leased, assigned, or sublicensed unless such restrictions are prohibited by law or such actions are approved by the copyright holder.

Trademarks and Permissions



HUAWEI, HUAWEI, and



are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android™ is a trademark of Google Inc.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.



is a registered trademark of Sony Corporation.



The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.

Other trademarks, products, services and company names mentioned herein may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed or the capacities and settings of the local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Therefore, the descriptions herein may not exactly match the purchased product or its accessories.

Huawei reserves the right to change or modify any information or specifications contained in this document at any time without prior notice and without any liability.

Third-Party Software Statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third-

party software and applications. Neither will Huawei provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any third-party software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source Android™ platform. Huawei has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei does not provide any warranty or representation in connect with any such compatibility and expressly excludes all liability in connection with such matters.

DISCLAIMER

ALL CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS DOCUMENT SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

All applicable export or import laws and regulations must be complied with and all necessary governmental permits and licenses must be obtained before exporting or importing the product, including the software and technical data, described in this document.

Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Use the following measures to help you protect your personal information:

- Put your device in a safe place to prevent unauthorised use.
- Set your device screen to lock and set a password or unlock pattern.
- Periodically back up personal information stored on your SIM card, memory card or your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- Do not open messages or emails from strangers to prevent your device from becoming infected with a virus.
- When using your device to browse the Internet, do not visit websites that might pose a security risk to avoid your personal information from being stolen.
- If you use services such as the portable Wi-Fi hotspot or Bluetooth, set passwords for these services to prevent unauthorised access. Turn these services off when they are not in use.
- Install device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or authorised third-party application providers.
- Using unauthorised third-party software to update your device may damage your device or put your personal information at risk. It is recommended that you update through your device's online update feature or download official update packages for your device model from Huawei.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Some third-party application providers may collect detection and diagnostic information on your device to improve their products and services.

Obtaining help

Read the Quick Start Guide included with your phone.

Touch **Settings** > **System** > **About phone** > **Legal** to read the legal information.

Visit <http://consumer.huawei.com/en/> for more information.

This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Please visit <http://consumer.huawei.com/en/support/hotline> for recent updated hotline and email address in your country or region.

Model: EVR-N29

EMUI 9.1.1_01